

LEX L10g Mission Critical Handheld User Guide

MARCH 2016 MN002858A01-A

Copyrights

The Motorola products described in this document may include copyrighted Motorola computer programs. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola.

© 2016 Motorola Solutions, Inc. All Rights Reserved

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Disclaimer

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a particular system, or may be dependent upon the characteristics of a particular mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola contact for further information.

Trademarks

 
MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive

The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trash bin label on the product (or the package in some cases).

As defined by the WEEE directive, this cross-out trash bin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.



Contact Us

Motorola Solution Support Center

The Solution Support Center (SSC) is the primary Motorola Solutions support contact. Call:

- · Before any software reload.
- To confirm troubleshooting results and analysis before removing and replacing a Field Replaceable Unit (FRU) and Field Replaceable Entity (FRE) to repair the system.

For	Phone
United States Calls	800-221-7144
International Calls	302-444-9800

North America Parts Organization

For assistance in ordering replacement parts or identifying a part number, contact the Motorola Parts organization. Your first response when troubleshooting your system is to call the Motorola SSC.

For	Phone
Phone Orders	800-422-4210 (US and Canada Orders)
	For help identifying an item or part number, select choice 3 from the menu.
	302-444-9842 (International Orders)
	Includes help for identifying an item or part number and for translation as needed.
Fax Orders	800-622-6210 (US and Canada Orders)

Comments

Send questions and comments regarding user documentation to documentation@motorolasolutions.com.

Provide the following information when reporting a documentation error:

- The document title and part number
- · The page number with the error
- A description of the error

We welcome your feedback on this and other Motorola manuals. To take a short, confidential survey on Motorola Customer Documentation, go to docsurvey.motorolasolutions.com or scan the following QR code with your mobile device to access the survey.




Latest Manual Versions

You can verify the latest version of this manual at https://businessonline.motorolasolutions.com.

Document History

Version	Description	Date
MN002858A01- A	Initial release of the <i>LEX L10g Mission Critical Handheld User Guide</i> .	March 2016

 

Contents

Copyrights	3
Contact Us	5
Document History	7
List of Figures	15
List of Tables	
List of Procedures	
Chapter 1: About this Guide	
1.1 Versions	
1.1.1 Operating System Version	
1.1.2 Software Build Number	
1.1.3 Kernel Version	25
1.2 Chapter Descriptions	
1.3 Helpful Background Information	26
1.4 Notational Conventions	
1.5 Icon Conventions	26
1.6 Regulatory Information	27
1.7 Service Information	27
1.8 Documentation Set	28
Chapter 2: Getting Started	31
2.1 Features	31
2.2 Unpacking	33
2.3 Setting Up	33
2.3.1 Removing the Screen Protective Film	33
2.3.2 Removing the Battery Cover	34
2.3.3 Installing a microSD or CRYPTR micro Encryption Card	34
2.3.4 Removing the microSD or CRYPTR Card	35
2.3.5 Installing the Public and Private SIM Cards	35
2.3.6 Removing the Public and Private SIM Cards	36
2.3.7 Installing the Battery	37
2.3.8 Removing the Battery	37
2.4 Charging	37
2.4.1 Charging Temperature	38
2.4.2 Battery Charge Indications	38
2.4.3 Battery Management	39
2 4 3 1 Monitor Battery Usage	40

	2.4.3.2 Low Battery Notification	40
	2.4.3.3 Battery Optimization	41
	2.5 Powering On the LEX for the First Time	42
	2.6 Powering Off	44
	2.7 Entering and Exiting the Suspend Mode	44
	2.7.1 Setting Time Out to Enter Suspend Mode	45
	2.8 Covert Mode	45
	2.8.1 Turning On Covert Mode	45
	2.8.2 Turning Off Covert Mode	46
	2.9 Locking the LEX Series Device	46
	2.9.1 Selecting a Locking Option	47
	2.9.1.1 Specifying a Face Unlock	47
	2.9.1.2 Specifying a Pattern	48
	2.9.1.3 Specifying a PIN or Password	48
	2.9.1.4 Setting the Timeout for Locking	49
	2.9.2 Unlocking the Device	49
	2.9.2.1 Unlocking the LEX L10g Face Unlock	49
	2.9.2.2 Unlocking the LEX L10g Using a Pattern	50
	2.9.2.3 Unlocking the LEX L10g Using a PIN or Password	50
	2.9.3 Calling Emergency from a Locked LEX L10g	50
	2.10 Setting the Date and Time	50
	2.11 Setting the Display	51
	2.11.1 Setting Screen Brightness	51
	2.11.2 Setting Up Wallpapers	52
	2.11.3 Setting Screen Rotation	52
	2.11.4 Setting Up Sleep Mode	53
	2.11.5 Setting Up Daydream	53
	2.11.6 Setting the Font Size	54
	2.11.7 Enabling Cast Screen	54
	2.11.7.1 Projecting the LEX L10g Screen on Another Device	
	2.12 General Sound Setting	55
	2.13 Public and Private Carrier Modes	56
	2.13.1 Switching Modes Using the Power Button	56
	2.13.2 Switching Modes Using the Settings App	57
	2.14 Emergency Button	58
Cha	pter 3: Using the LEX Series Device	59
	3.1 Using the Touchscreen	59
	3.2 Using the On-Screen Keyboard	60
	3.2.1 Android Keyboard Settings	61

	3.3 Motorola Solutions Home Experience	61
	3.3.1 LEX L10g Home Screen	62
	3.3.1.1 Home Screen Overlay	63
	3.3.2 Customizing the Home Screen	63
	3.3.2.1 Adding Widgets	63
	3.3.2.2 Moving Widgets	68
	3.3.2.3 Removing Widgets	68
	3.3.2.4 Example of a Customized Home Screen Panel	68
	3.4 Status Bar	69
	3.5 Notification Icons	70
	3.6 Status Icons	71
	3.7 Managing Notifications	72
	3.8 Working with Status	73
	3.9 Quick Settings	74
	3.10 Applications	75
	3.11 Folders	77
	3.11.1 Creating a Folder	77
	3.11.2 Naming Folders	78
	3.11.3 Removing a Folder	78
	3.12 Accessing Files from a Computer	78
Cha	apter 4: Calling	81
	4.1 Making a Call Using the Dialer	81
	4.2 Making a Call Using People List Contacts	82
	4.3 Making a Call Using Call History	83
	4.4 Making a Conference Call	84
	4.5 Answering Calls with a Bluetooth Headset	87
	4.6 Call Settings	87
	4.6.1 Resolving Visual Voicemail for LEX L10g	88
	4.7 Requesting an Emergency Alert from LEX L10g	88
Cha	apter 5: Radio Services	91
	5.1 Pairing Radio with the LEX L10g	91
	5.2 Unpairing Radio from LEX L10g	94
	5.3 Setting Zone and Channel	97
	5.4 Setting Radio Volume	99
	5.5 Favorite Channels	100
	5.5.1 Viewing Favorite Channels	100
	5.5.2 Adding a Favorite Zone and Channel	101
	5.5.3 Removing a Favorite Channel	103
Cha	apter 6: Messaging	105

6.1 Sending a Text Me	ssage	105
6.2 Sending a Multimed	dia Message	106
Chapter 7: Applications	S	109
7.1 Using File Browser		109
7.2 Managing People 0	Contacts	11C
	ople	
	ople	
7.2.3 Deleting P	eople	111
7.3 Camera		111
7.3.1 Taking Pho	otos	112
7.3.2 Taking a P	Panoramic Photo	114
7.3.3 Recording	Videos	115
7.3.4 Camera Se	ettings	116
7.3.5 Video Sett	ings	118
7.4 Gallery		119
7.4.1 Working w	rith Albums	120
7.4.1.1 S	haring an Album	121
7.4.1.2 G	etting Album Information	121
7.4.1.3 D	eleting an Album	122
7.4.2 Working w	rith Photos	122
7.4.2.1 Vi	iewing and Browsing Photos	122
7.4.2.2 R	otating a Photo	123
7.4.2.3 C	ropping a Photo	124
7.4.2.4 S	etting a Photo as a Contact Icon	124
7.4.2.5 SI	haring a Photo	125
7.4.2.6 D	eleting a Photo	125
7.4.3 Working w	rith Videos	125
7.4.3.1 W	/atching a Video	126
7.4.3.2 S	haring a Video	126
7.4.3.3 D	eleting a Video	127
Chapter 8: Wireless		129
8.1 Wireless Wide Area	a Networks	129
8.1.1 Sharing the	e Mobile Data Connection	129
8.1.1.1 C	onfiguring USB Tethering	129
8.1.1.2 C	onfiguring Bluetooth Tethering	130
8.1.1.3 C	onfiguring Portable Wi-Fi Hotspot Settings	131
8.1.2 Data Usag	je	132
8.1.2.1 Se	etting Data Usage Warning	133
81225	etting Auto-Sync	133

	8.1.3 Disabling Data When Roaming	133
	8.1.4 Limiting Data Connection to a Network	134
	8.1.5 Editing the Access Point Name	134
	8.1.6 Adding a Virtual Private Network (VPN)	135
	8.1.7 Cell Broadcasts	135
8	.2 Wireless Local Area Networks	136
	8.2.1 Scanning and Connecting to a Wi-Fi Network	136
	8.2.2 Configuring a Wi-Fi Network	138
	8.2.3 Adding a Wi-Fi Network	139
	8.2.4 Manually Adding a Wi-Fi Network	139
	8.2.5 Advanced Wi-Fi Settings	140
	8.2.6 WLAN Configuration	141
	8.2.7 Modifying a Wi-Fi Network	141
	8.2.8 Removing a Wi-Fi Network	141
8	.3 Bluetooth Device	142
	8.3.1 Adaptive Frequency Hopping	142
	8.3.2 Bluetooth Security	143
	8.3.3 Bluetooth Profiles	143
	8.3.4 Bluetooth Power States	144
	8.3.5 Bluetooth Radio Power for Android	144
	8.3.5.1 Enabling Bluetooth	144
	8.3.5.2 Disabling Bluetooth	145
	8.3.6 Discovering Bluetooth Devices	145
	8.3.7 Changing the Bluetooth Name	146
	8.3.8 Connecting to a Bluetooth Device	147
	8.3.9 Selecting Profiles on a Bluetooth Device	147
	8.3.10 Unpairing a Bluetooth Device	147
8	.4 Pairing the LEX L10g with a Radio	148
	8.4.1 Establishing a Connection	148
Chapte	er 9: ADB and USB Driver Setup	151
9	.1 Required Software and Hardware	151
9	.2 Installing USB Driver and ADB	151
Chapte	er 10: Accessories	157
1	0.1 Accessories	157
1	0.2 USB Cable	157
1	0.3 Desktop Cradle	158
1	0.4 Vehicle Cradle	158
1	0.5 Holster	159
Chapte	er 11: Maintenance and Troubleshooting	161


	11.1 Maintaining the LEX Series Device	161
	11.2 Battery Safety Guidelines	161
	11.3 Cleaning Guidelines	162
	11.4 Cleaning the LEX Series Device	163
	11.5 Cleaning the Interface Connector	163
	11.6 Cleaning the Battery Contacts	163
	11.7 Troubleshooting	164
	11.8 Back Up or Restore Data on Your Device	166
	11.8.1 Backing Up the LEX Series Device Manually	166
	11.8.1.1 Backing up Contacts with Android	167
	11.8.1.2 Syncing Mail, Contacts, Calendar, and More with Google	169
	11.8.1.3 Backing Up Your Data and Settings with Android Backup Service	169
	11.9 Resetting the LEX Device	170
	11.9.1 Performing Factory Data Reset	170
Cha	pter 12: Technical Specifications	. 171

List of Figures

Figure 1: Manufacturing Label	28
Figure 2: LEX L10g Features	31
Figure 3: Removing the Screen Protective Film	34
Figure 4: Removing the Battery Cover	34
Figure 5: Installing the microSD or CRYPTR micro Encryption Card	35
Figure 6: Installing the Public and Private SIM Cards	36
Figure 7: Installing the Battery	37
Figure 8: Charging the LEX L10g	38
Figure 9: Charge and Notification LED	39
Figure 10: Battery Screen	40
Figure 11: Low Battery Notification	41
Figure 12: Quick Settings Menu — Airplane Mode	42
Figure 13: Selecting Power Off	44
Figure 14: Power Button Menu	46
Figure 15: Power Button Menu	46
Figure 16: Sound Screen	55
Figure 17: Volume Button	56
Figure 18: Service Switch	57
Figure 19: Switch Networks Confirmation Popup	57
Figure 20: Switch Networks Confirmation Popup	58
Figure 21: Android Keyboard Settings	60
Figure 22: Default Home Screen	62
Figure 23: Widgets Screen	64
Figure 24: Example of a Widget Added to New Panel	65
Figure 25: Empty My Apps Widget	66
Figure 26: List of Shortcuts for My Apps Widgets	66
Figure 27: My Apps Widget with Shortcuts Added	67
Figure 28: My Status Widget	
Figure 29: Status Selection	68
Figure 30: Example of a Customized Home Screen Panel	69
Figure 31: Status Bar	69
Figure 32: Notification Panel	73
Figure 33: Quick Settings Panel	74
Figure 34: Opened Unnamed Folder	78
Figure 35: Named Folder	78
Figure 36: Notifications Screen	79


Figure 37: MTP / PTP Selection Screen	80
Figure 38: Dialer Screen	81
Figure 39: Call in Progress	82
Figure 40: People List Contact	83
Figure 41: Call History Tab	84
Figure 42: Two Calls	85
Figure 43: Two Calls Connected	86
Figure 44: Merged Calls	86
Figure 45: Emergency Alert Activation Popup	89
Figure 46: Notification Screen with Emergency Notification	90
Figure 47: Pair With a Radio Screen	92
Figure 48: Blue Pairing Dots	92
Figure 49: Bluetooth Connection Screen	93
Figure 50: Radio Services Screen	93
Figure 51: Radio Services Screen	94
Figure 52: Unpair Radio Screen	94
Figure 53: Pairing Radio Screen	95
Figure 54: Paired Bluetooth Device	95
Figure 55: Unpair Complete	96
Figure 56: Select Unpair	96
Figure 57: Unpaired Screen	97
Figure 58: Radio Services Screen	98
Figure 59: Channel Selection Screen	98
Figure 60: Radio Services Screen	99
Figure 61: Radio Volume Slider	99
Figure 62: Radio Services Screen	100
Figure 63: Radio Services Favorites Screen	101
Figure 64: Radio Services Screen	102
Figure 65: Add TalkGroups Screen	102
Figure 66: Radio Services Screen	103
Figure 67: Favorites Menu	103
Figure 68: Edit Favorites Screen	104
Figure 69: New Message Screen	105
Figure 70: New Multimedia Message Screen	106
Figure 71: File Browser Screen	109
Figure 72: Camera Photo Screen	112
Figure 73: Camera Screen	113
Figure 74: Camera Option Bar	113
Figure 75: Camera Zoom	114

Figure 76: Panoramic Mode	114
Figure 77: Panoramic Frame	115
Figure 78: Video Mode	115
Figure 79: Camera Settings	116
Figure 80: First More Options Screen	117
Figure 81: Second More Options Screen	117
Figure 82: Third More Options Screen	118
Figure 83: Video Settings	118
Figure 84: First More Options Video Screen	119
Figure 85: Second More Options Video Screen	119
Figure 86: Gallery — Albums	120
Figure 87: Photos/Videos Inside an Album	121
Figure 88: Photo Example	123
Figure 89: Cropping Grid	124
Figure 90: Video Playback Controls	126
Figure 91: USB Cable Connection to Host Computer	130
Figure 92: Set up Wi-Fi Hotspot Dialog Box	132
Figure 93: Settings Screen	137
Figure 94: Wi-Fi Screen	137
Figure 95: WLAN Network Security Dialog Boxes	138
Figure 96: Bluetooth Pairing	146
Figure 97: Pairing Screen	149
Figure 98: Blue Pairing Dots	149
Figure 99: Access Computer	152
Figure 100: Select Destination	152
Figure 101: Access Device Manager	153
Figure 102: Select Update Drive Software	153
Figure 103: Select Browse my computer for driver software	154
Figure 104: Select Install this driver software anyway	154
Figure 105: Close the Installation	155
Figure 106: USB Cable	157
Figure 107: Desktop Cradle	158
Figure 108: Vehicle Cradle	159
Figure 109: Holster	159
Figure 110: Import/Export Contacts Popup	168
Figure 111: Export Confirmation Popup	168

 

List of Tables

Table 1: LEX L10g Features	31
Table 2: Charge and Notification LED — Charging Indications	39
Table 3: Using the Touchscreen	59
Table 4: Android Keyboard Settings	61
Table 5: Notification Icons	70
Table 6: Status Icons	71
Table 7: Applications	75
Table 8: Camera Icons and Actions	112
Table 9: Troubleshooting the LEX Series Device	164
Table 10: Technical Specifications	171
Table 11: General Accessories	173

 


List of Procedures

Removing the Battery Cover	34
Installing a microSD or CRYPTR micro Encryption Card	34
Removing the microSD or CRYPTR Card	35
Installing the Public and Private SIM Cards	35
Removing the Public and Private SIM Cards	
Installing the Battery	37
Removing the Battery	37
Turning Off the Radio	41
Powering On the LEX for the First Time	42
Powering Off	44
Entering and Exiting the Suspend Mode	44
Setting Time Out to Enter Suspend Mode	45
Turning On Covert Mode	45
Turning Off Covert Mode	46
Selecting a Locking Option	47
Specifying a Face Unlock	47
Specifying a Pattern	48
Specifying a PIN or Password	48
Setting the Timeout for Locking	49
Unlocking the LEX L10g Face Unlock	49
Unlocking the LEX L10g Using a Pattern	50
Unlocking the LEX L10g Using a PIN or Password	50
Calling Emergency from a Locked LEX L10g	50
Setting the Date and Time	50
Setting Screen Brightness	51
Setting Up Wallpapers	52
Setting Screen Rotation	52
Setting Up Sleep Mode	53
Setting Up Daydream	53
Setting the Font Size	54
Enabling Cast Screen	54
Projecting the LEX L10g Screen on Another Device	54
Switching Modes Using the Power Button	56
Switching Modes Using the Settings App	57
Adding Widgets	63
Adding Shortcuts to the My Anns Widget	65

MN002858A01-A List of Procedures

Changing My Status	67
Moving Widgets	68
Removing Widgets	68
Creating a Folder	77
Naming Folders	78
Removing a Folder	78
Accessing Files from a Computer	78
Making a Call Using the Dialer	81
Making a Call Using People List Contacts	82
Making a Call Using Call History	83
Making a Conference Call	84
Resolving Visual Voicemail for LEX L10g	88
Requesting an Emergency Alert from LEX L10g	88
Pairing Radio with the LEX L10g	91
Unpairing Radio from LEX L10g	94
Setting Zone and Channel	97
Setting Radio Volume	99
Viewing Favorite Channels	100
Adding a Favorite Zone and Channel	101
Removing a Favorite Channel	103
Sending a Text Message	105
Sending a Multimedia Message	106
Adding People	110
Editing People	110
Deleting People	111
Taking Photos	112
Taking a Panoramic Photo	114
Recording Videos	115
Sharing an Album	121
Getting Album Information	121
Deleting an Album	122
Viewing and Browsing Photos	122
Rotating a Photo	123
Cropping a Photo	124
Setting a Photo as a Contact Icon	124
Sharing a Photo	125
Deleting a Photo	125
Watching a Video	126
Sharing a Video	126

Deleting a Video	127
Configuring USB Tethering	129
Configuring Bluetooth Tethering	130
Configuring Portable Wi-Fi Hotspot Settings	131
Configuring the Wi-Fi Hotspot	131
Setting Data Usage Warning	133
Setting Auto-Sync	133
Disabling Data When Roaming	133
Limiting Data Connection to a Network	134
Editing the Access Point Name	134
Adding a Virtual Private Network (VPN)	135
Cell Broadcasts	135
Scanning and Connecting to a Wi-Fi Network	136
Configuring a Wi-Fi Network	138
Adding a Wi-Fi Network	139
Manually Adding a Wi-Fi Network	139
Modifying a Wi-Fi Network	141
Removing a Wi-Fi Network	141
Enabling Bluetooth	144
Disabling Bluetooth	145
Discovering Bluetooth Devices	145
Changing the Bluetooth Name	146
Connecting to a Bluetooth Device	147
Selecting Profiles on a Bluetooth Device	147
Unpairing a Bluetooth Device	147
Establishing a Connection	148
Installing USB Driver and ADB	151
Cleaning the Interface Connector	163
Cleaning the Battery Contacts	163
Backing Up the LEX Series Device Manually	166
Backing up Contacts with Android	167
Syncing Mail, Contacts, Calendar, and More with Google	169
Backing Up Your Data and Settings with Android Backup Service	169
Resetting the LEX Device	170
Performing Factory Data Reset	170

 

Chapter 1

About this Guide

This guide provides information about using the LEX series Mission Critical Handheld and accessories.



NOTICE: Screens and menu options may be changed or customized by your agency to show different information.

1.1

Versions

This guide covers various software configurations and references are made to operating system or software versions discussed in the following three subsections.

1.1.1

Operating System Version

The Operating System for the LEX L10g is the Android Operating System.

To determine the Operating System version, from the **Home** screen touch ^{□□} → **About phone** → **Android Version**. The last line provides the Android version information. For example: 4.4.4.

1.1.2

Software Build Number

This topic has information on how to find the software build number of your LEX L10g.

To determine the software build number, from the **Home** screen touch \longrightarrow \longrightarrow **About phone** \longrightarrow **Build Number**.

1.1.3

Kernel Version

The Kernel version can be found in the **Settings** application.

To determine the kernel version, from the **Home** screen, touch $\textcircled{=} \to \textbf{About phone} \to \textbf{Kernel version}$.

1.2

Chapter Descriptions

This guide provides information on the features listed in the chapter descriptions below:

- About this Guide on page 25 Chapter 1, presents contacts and general information related to this
 product.
- Getting Started on page 31 Chapter 2, explains getting the LEX series device up and running for the first time.
- Using the LEX Series Device on page 59 Chapter 3, is a reference to operating the LEX L10g.
- Calling on page 81 Chapter 4, is a reference to making and receiving calls.

- Radio Services on page 91 Chapter 5, is a reference to connecting the LEX L10g to a Land Mobile Radio for communicating on LTE and P25 systems.
- Messaging on page 105 Chapter 6, is a reference to sending text and multimedia messages.
- Applications on page 109 Chapter 7, explains using basic applications installed on the LEX series device such as Camera, People, and File Browser.
- Wireless on page 129 Chapter 8, explains configuring the LEX series device to operate on a personal, local, and wide area wireless network.
- ADB and USB Driver Setup on page 151 Chapter 9, is a reference to setting up the Android Debug Bridge (ADB) and USB driver for your Windows PC.
- Accessories on page 157 Chapter 10, is a reference to available accessories and how to use them with the LEX L10g.
- Maintenance and Troubleshooting on page 161 Chapter 11, is a reference to cleaning and storing the LEX L10g, and troubleshooting solutions for potential problems.
- Technical Specifications on page 171 Chapter 12, provides technical specifications for the LEX L10g.

1.3

Helpful Background Information

Motorola Solutions offers various courses designed to assist in learning about the system.

For information, go to http://www.motorolasolutions.com/training to view the current course offerings and technology paths.

1.4

Notational Conventions

The following conventions are used in this document:

Italics are used to highlight the following:

- · Icons on a screen
- Chapters and sections in this and related documents

Bold text is used to highlight the following:

- · Dialog box, window, and screen names
- Drop-down list and list box names
- Check box and radio button names
- Key names on a keypad
- · Button names on a screen

Bullets (•) indicate:

- · Action items
- Lists of alternatives
- Lists of required steps that are not necessarily sequential

Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

1.5

Icon Conventions

The documentation set is designed to give the reader more visual clues.

MN002858A01-A Chapter 1: About this Guide

The following graphic icons are used throughout the documentation set. These icons and their associated meanings are described below.



WARNING: The word WARNING with the associated safety icon implies information that, if disregarded, could result in death or serious injury, or serious product damage.



CAUTION: The word CAUTION with the associated safety icon implies information that, if disregarded, may result in minor or moderate injury, or serious product damage.



NOTICE: NOTICE contains information more important than the surrounding text, such as exceptions or preconditions. They also refer the reader elsewhere for additional information, remind the reader how to complete an action (when it is not part of the current procedure, for instance), or tell the reader where something is located on the screen. There is no warning level associated with a note.

1.6

Regulatory Information

BEFORE USING THIS device, READ the Product Regulatory, Safety & RF Exposure Guide (PN MN001458A01-A) included with this package.

1.7

Service Information

If you have a problem with your equipment, contact Motorola Solutions Global Customer Support Center for your region.

Contact information is available at: http://www.motorolasolutions.com/support. You can also call 1-800-323-9949 for support and select option 6 for PS LTE infrastructure and devices. When contacting support, have the following information available:

- Serial number of the unit (found on manufacturing label)
- Model number or product name (found on manufacturing label)
- · Software type and version number

Figure 1: Manufacturing Label



Motorola Solutions responds to calls by e-mail, telephone or fax within the time limits set forth in support agreements.

If your problem cannot be solved by Motorola Solutions Global Customer Support Center, you may need to return your equipment for servicing and will be given specific directions. Motorola Solutions is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. Remove the CRYPTR card or microSD card and SIM card before shipping.

If you purchased your product from a Motorola Solutions business partner, contact that business partner for support.

1.8

Documentation Set

The documentation set for the LEX series device provides information for specific user needs.

 
Unless otherwise specified, Motorola Solutions documents listed here are available from Motorola Online at https://businessonline.motorolasolutions.com. If you are new to Motorola Online, follow the on-screen instructions to sign up for an account. To access Public Safety LTE infrastructure and device manuals, select Resource Center → Product Information → Manuals → Network Infrastructure.

The documentation set includes:

- LEX L10g Quick Start Guide PN MN001458A01-B describes how to get the device up and running.
- LEX L10g Mission Critical Handheld User Guide (this guide) PN MN002858A01-A describes how to use the device.
- LEX L10g Regulatory and Safety Guide PN MN002346A01-B describes how to safely use the
 device.
- LEX L10g Service Provisioning Guide PN MN002860A01-A provides technical instructions on how to activate, provision, and configure the device.

MN002858A01-A Chapter 1: About this Guide

For the latest version of this guide and all guides, go to: https://businessonline.motorolasolutions.com.



Chapter 2

Getting Started

Use the information in this chapter to help you get started using the LEX L10g.

2.1

Features

The LEX L10g features are shown in the following figure and summarized in the following table.

Figure 2: LEX L10g Features

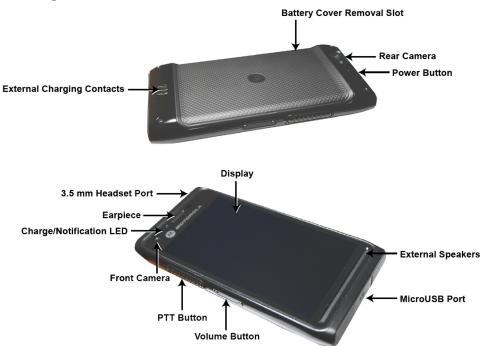


Table 1: LEX L10g Features

Function
Solid Blue: New notification (New Voice mail, New Text messages, Missed Calls, Android App Notifications, and so on) Off: Battery is not charging.
Solid Red: Battery is charging.
Blinking Amber: Waiting to charge.
Solid Green: Fully Charged.
Tap screen displays all information to operate the device.

Table continued...

Item	Function
	Recent Apps key – Press to switch to, stop or manage applications currently running on the background of the device.
	Home key – Displays the Home screen with a single tap.
←	Back key – Displays the previous screen. Closes the keyboard if the on-screen keyboard is open.
External Speakers	Use for communications in handset mode. Provides audio output for video and voice playback in speakerphone mode.
	Menu key – At any screen or application, press to see available options.
3.5 mm Headset Port	Connects to headsets (3.5 mm plug).
	NOTICE: Do not use 2.5 mm to 3.5 mm adapters
Volume Up/Down Buttons	Increase and decrease audio volume.
PTT Button	Push-to-Talk (PTT) button enables Push-to-Talk services over a broadband network and can also be interconnected to Project 25 Land Mobile Radio (LMR) networks. The PTT application offers calls, alerts, group calls, Talk Group calls, and Talk Group monitoring and scanning.
Power Button	Press and hold to turn on the device. Press to turn the screen on or off. Press and hold to select one of these options:
	 Power On/Off — Turn On/Off.
	 Airplane mode — Disables all wireless connections.
	 Service switch — Switches between public and Private carrier modes.
	 Covert mode — In covert mode, all sounds, and visual indications are turned off. See Covert Mode on page 45.
	 Vibrate mode — Sets to vibrate only.
	 Speaker on — Routes the earpiece sound to the speaker.
Front Camera	Used to capture live video for video calls.
Earpiece	Provides audio in handset mode.
External Charging Contacts	Provides power to the device from cradles.
Battery Cover Removal Slot	Assists in battery cover removal to provide access to the battery, SIM, CRYPTR, and microSD card holders.

Table continued...

MN002858A01-A Chapter 2: Getting Started

Item	Function
Rear Camera and Flash	Takes photos and video, and provides flash illumination for the camera.

2.2

Unpacking

Carefully remove all protective material from the LEX series device and save the shipping container for later storage and shipping.

Verify that the following were received:

- LEX L10g
- · Battery Cover
- 2280 mAh Lithium-ion battery
- Charger
- USB Cable
- Regulatory Guide
- · Quick Start Guide

Inspect the equipment for damage. If any equipment is missing or damaged, contact the Motorola Solutions Support Center immediately.

2.3

Setting Up

The initial setup of the LEX L10g requires that the battery and any cards be installed.



NOTICE: The device may be delivered to you with battery, SIM card, microSD card and/or CRYPTR cards already installed, activated, and ready for use. In this case, ignore steps 2 through 6 of the following section if they were already performed.

Before using for the first time, perform the following:

- 1 Remove the screen protection film from the screen, see Removing the Screen Protective Film on page 33.
- 2 Install the public and/or Private SIM cards, see Installing the Public and Private SIM Cards on page 35.
- 3 Install the microSD or CRYPTR card (optional), see Installing a microSD or CRYPTR micro Encryption Card on page 34.
- 4 Install the battery, see Installing the Battery on page 37.
- 5 Install the battery cover.
- **6** Charge the device, see Charging on page 37.

2.3.1

Removing the Screen Protective Film

The device is provided with a screen protective film that protects the device during shipping.

To enable proper operation, the screen protector must be removed before use.

Figure 3: Removing the Screen Protective Film



2.3.2

Removing the Battery Cover

This procedure explains how to remove the battery cover.

Procedure:

- 1 Hold the device firmly as shown.
- 2 Using the battery cover removal slot, gently lift the battery cover up and away.

Figure 4: Removing the Battery Cover



2.3.3

Installing a microSD or CRYPTR micro Encryption Card

The LEX L10g card holder can support either a microSD card or a CRYPTR micro encryption card. The microSD card is a removable flash memory used for storing media on the device. The device can support microSD cards with up to 64GB memory space. A CRYPTR micro encryption module can optionally be installed in the SD card slot of the LEX L10g. The CRYPTR micro provides FIPS 140-2

MN002858A01-A Chapter 2: Getting Started

Level 3 storage for credentials/keys for Data At Rest (DAR) encryption and MVPN. The slot of the card is located under the battery

When and where to use:



NOTICE: The LEX L10g may be delivered to you with battery, SIM card, and microSD or CRYPTR card already installed, activated, and ready for use. In case a CRYPTR is preinstalled in the device, you must change the CRYPTR password provided by your technical support. This is not a password to access the device but a password to protect Motorola Solutions secure applications. The CRYPTR password is required whenever the device is restarted.

Procedure:

- 1 Slide the card into the card holder slot with contacts facing down.
- 2 Push the card into the slot until it is fully seated and locked into place.

Figure 5: Installing the microSD or CRYPTR micro Encryption Card



2.3.4

Removing the microSD or CRYPTR Card

This procedure explains how to remove a microSD or CRYPTR micro encryption card.

Procedure:

- 1 Press and hold the **Power** button for three seconds.
- 2 Touch Power Off.
- 3 Touch OK.
- 4 Lift the battery cover.
- 5 Push the **Card Holder** lock down to release the card.
- 6 Remove the card from the holder.
- **7** Replace the battery cover.

2.3.5

Installing the Public and Private SIM Cards

Public and private phone services require a Subscriber Identification Module (SIM) card.

Prerequisites: The SIM card can contain the following information:

- · Mobile phone service provider account details.
- Information regarding service access and preferences.

- Contact information, which can be moved to the People application on the LEX L10g.
- Any additional subscribed services.



NOTICE: The LEX L10g requires activated SIM cards. Obtain activated SIM cards from your organization administrator.



NOTICE: If using a Verizon SIM card on LEX L10g device, Visual Voicemail feature is not supported. To resolve visual voicemail issue, see Resolving Visual Voicemail for LEX L10g on page 88.



CAUTION:

- Electrostatic discharge (ESD) precaution.
- For proper ESD precautions to avoid damaging the SIM card. Proper ESD precautions include, but not limited to, working on an ESD mat and ensuring that the user is properly grounded.

When and where to use: Use this procedure to install a SIM card:

Procedure:

- 1 If the battery is in place, remove the battery as described in Removing the Battery on page 37.
- 2 Slide the SIM card into the SIM card holder with the contacts facing down. Note the card notch position.
- **3** Push that the SIM card into the holder until it is fully seated and flat. You should hear a click when the SIM card in fully in place.

Figure 6: Installing the Public and Private SIM Cards



2.3.6

Removing the Public and Private SIM Cards

When and where to use: Use this procedure to remove the public or private SIM cards.

Procedure:

- 1 Press and hold the **Power** button for three seconds.
- 2 Tap Power Off.
- 3 Tap **OK**.
- 4 Lift the battery cover.
- 5 Slide the battery latch to **Unlock** position.
- 6 Lift the battery out of the device.

- 7 Push the SIM card to release it from the holder.
- 8 Remove the SIM card.
- **9** Place the battery back into the device.
- **10** Snap the battery cover back into place.

2.3.7

Installing the Battery

When and where to use: Perform this procedure to install a battery.

Procedure:

- 1 Remove the battery from the packaging.
- 2 Insert the battery into the battery compartment with the battery contacts facing the bottom of the device.

Figure 7: Installing the Battery



- 3 Press the top of battery into place.
- 4 Place the battery cover into place.
- 5 Ensure that all battery cover snaps are fully engaged.

2.3.8

Removing the Battery

When and where to use: Perform this procedure to remove the battery.

Procedure:

- 1 Slide a finger nail (preferably a thumb nail) into the Battery Cover removal slot and gently pull the Battery Cover away from the device.
- 2 Remove the Battery Cover.
- 3 Slide the Battery Lock up and hold it.
- 4 With the tip of your finger, lift up the battery from the side closest to the top side of the device.

2.4

Charging

Before using for the first time, charge the battery using the provided USB Charger and USB Cable or connect the USB Cable to the USB port of a personal computer. An unused battery fully charges in less than six hours.

The battery can also be charged by one of the optional charging cradles.

Figure 8: Charging the LEX L10g





NOTICE: Keep the USB cover closed when USB not in use.



NOTICE: For detailed description, installation and operation of the LEX L10g accessories, refer the quick start guides provided with each accessory.

2.4.1

Charging Temperature

Charge batteries in temperatures from 0°C to 40°C (32°F to 104°F). Note that charging is intelligently controlled by the device.

To accomplish this, for small periods of time, the device alternately enables and disables battery charging to keep the battery at acceptable temperatures. The device LED indicates when charging is disabled due to abnormal temperatures by fast blinking amber (once every 2 seconds).

2.4.2

Battery Charge Indications

The Charge and Notification LED at the top, front of the LEX L10g.

Battery charging and power level are indicated by a battery icon on the status bar.



NOTICE: Before checking the battery charge level, remove from any power source (cradle or USB cable connection).

Figure 9: Charge and Notification LED

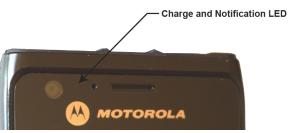


Table 2: Charge and Notification LED — Charging Indications

Status	Indications
Off	Battery is not charging. Could indicate that:
	Device is not inserted correctly in the cradle
	 Device is not connected to a USB cable
	 Charger or cradle is not powered
Slowly blinking red (once every 2 seconds)	Battery power is low (less than 5% power left).
Solid red	Charging.
Fast blinking red (once every 0.5 second)	Charging error:
	Temperature is too low or too high
	 Charging has gone on too long without com- pletion (typical charge is four hours)
Slowly blinking green (once every 2 seconds)	Battery is greater than 90% charged.
Solid green	Device is charged.
Slowly blinking blue (once every 4 seconds)	A new notification has been received.
Alternately blinking blue (1 second) and red (3 seconds)	Device is charging and a new notification is received.
Alternately blinking blue (1 second) and green (3 seconds)	Device is charged and a new notification is received.
Slowly blinking blue and red (every other second)	Battery power is low (less than 5% power left) and a new notification is received.
Alternately blinking blue (1 second) and fast blinking red (every 0.5 seconds for 3 seconds)	A new notification is received during a charging error.
Slowly blinking amber (once every 2 seconds)	Device is waiting to charge.

When the battery power falls below a predetermined level the icon indicates the status and a battery dialog box appears indicating the status of the battery. The message displays until the you tap **Dismiss**.

To monitor battery usage, from the **Home** screen, touch $\textcircled{\tiny +} \rightarrow \textcircled{\tiny -} \rightarrow \textbf{Battery}$.

2.4.3

Battery Management

This topic explains how to check the status of your battery and what you can do to make your battery last longer.



NOTICE: Before checking the battery charge level, remove from any AC power source (cradle or cable).

To check the charge status of the main battery, tap \longrightarrow \longrightarrow **About phone** \longrightarrow **Status**.

Battery status indicates that the battery is discharging and **Battery level** lists the battery charge (as a percentage of fully charged).

2.4.3.1

Monitor Battery Usage

The **Battery** screen lists which applications consume the most battery power. Also use it to turn off applications that were downloaded if they are consuming too much power.

To monitor battery usage, tap \longrightarrow \longrightarrow **Battery**.

Figure 10: Battery Screen



The **Battery** screen lists the applications using the battery. The discharge graph at the top of the screen shows the rate of the battery discharge since last charged (short periods of time when connected to a charger are shown as thin green lines at the bottom of the chart), and how long it has been running on battery power.

Tap an application in the **Battery** screen to display details about its power consumption. Different applications display different information. Some applications include buttons that open screens with settings to adjust power use.

2.4.3.2

Low Battery Notification

When the battery charge level drops below 15%, the device displays a notice to connect to power. The user should charge the battery using one of the charging accessories.

Figure 11: Low Battery Notification



When the battery charge drops below 5%, the device displays a notice to connect the device to power. The user must charge the battery using one of the charging accessories.

When the battery charge drops below 1%, the device turns off.

Charge using one of the charging accessories to retain data.

2.4.3.3

Battery Optimization

Observe the following battery saving tips:

- Leave inside a cradle connected to AC power at all times when not in use.
- Turn off Bluetooth if not needed.
- Turn off Wi-Fi if not needed.
- Change screen time-out to as short as possible.
- Charge when not in use.
- Set the screen to Suspend (Sleep) after a short period of non-use.
- · Reduce screen brightness.
- Minimize use of applications that keep the device from suspending, for example, music or video applications.

2.4.3.3.1


Turning Off the Radio

When and where to use: Use this procedure to turn off the device.

Procedure:

1 Press the **Power** button until the **Quick Settings** menu appears.

Figure 12: Quick Settings Menu — Airplane Mode

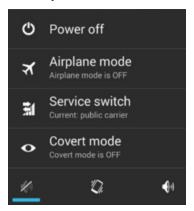

2 Tap Airplane mode. Alternately, open the Notification panel and tap → Airplane Mode.
The airplane icon appears in the Status bar indicating that all the radios are off.

2.5


Powering On the LEX for the First Time

When and where to use:

Use this procedure to set up your LEX series device.

Procedure:

- 1 Press Power button to turn on the device.
- 2 From **Welcome** window, scroll down and select a language and tap the right arrow key. Welcome Setup Screen

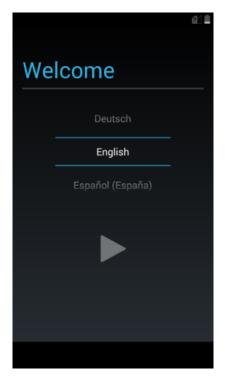



NOTICE: To complete the setup process, you must have a Wi-Fi or mobile Internet connection.

- 3 Insert SIM card (read the instructions that came with your phone) or tap Skip.
- 4 If you find yourself within range of a wireless network, you can now connect to it. Select your network from the list and enter the password if required. Then tap **Next**.
- **5** From **Got Google?** window, if you already have a Gmail account tap **Yes**. Tap **No** to set up a new account and follow the steps to choose a username and set a password.



NOTICE: An email address that you use for any of the following counts as a Google Account:

- Gmail
- YouTube
- Google Apps
- AdWords
- Any other Google product
- **6** From the **Sign in** window, enter your Gmail credentials in the **Email** and **Password** fields and tap the right arrow key.
- 7 Tap **OK** to agree to the Terms of Service. The device signs in to your domain. This process may take a few minutes.
- 8 From Google services window, configure BACKUP & RESTORE, LOCATION, and COMMUNICATION settings.
- **9** Tap the right arrow icon.
- 10 From Set up payment info window, tap the option representing your preferred payment method, and tap Continue to proceed. You can also tap SKIP to set up your billing information later.
- 11 From This phone belongs to: window, configure your name and tap Done.
- 12 From Google Now window, tap the right arrow key and tap No thanks or Yes I'm in.

The Welcome - Make Yourself at Home window opens. Personalize your device.




Powering Off

When and where to use: Use this procedure to power off the LEX L10g.

Procedure:

1 Press and hold the **Power** button until the **Power Button** menu appears.

Figure 13: Selecting Power Off

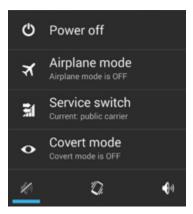

2 Tap Power off and then OK.

Your phone will shut down is displayed on the screen.

2.7

Entering and Exiting the Suspend Mode

Suspend mode (also known as sleep mode) is a low-power mode of operation that helps reduce electrical power consumption by shutting down parts of the device that are not in use. The device goes into Suspend mode when the **Power** button is pressed or after a time out period of inactivity.

When and where to use: Use this procedure to enter and exit Suspend mode:

Procedure:

1 To enter **Suspend** mode, press and release the **Power** button.

The screen turns off.



NOTICE: In **Suspend** mode, the following items continue to operate:

- Power button
- PTT Button (if set to be used)
- Notification LEDs
- Wireless communication.
- 2 To exit **Suspend** mode, press and release the **Power** button.

2.7.1

Setting Time Out to Enter Suspend Mode

When and where to use: Use this procedure to set the period of inactivity before suspend mode occurs.

Procedure:

- 2 Select the inactivity duration before **Suspend** mode becomes active.
- 3 Tap 🗀.

2.8

Covert Mode

In the **Covert Mode**, the device goes dark and quiet. All visible and audible alerts and notifications are shut down. This feature makes the LEX L10g effectively unnoticeable even in a silent and dark environment.

In Covert Mode, the following sounds, visual indications, and keys are disabled:

- · Display brightness
- Touchscreen
- Keylight
- LED indications
- Vibration
- Speaker audio



NOTICE: In **Covert Mode**, sound is routed to a Bluetooth headset, if connected or sound is routed to a wired earpiece, if connected. Alternatively, sound is routed to the earpiece.

Tone indications



NOTICE: In Covert Mode, the following features remain active:

- **Power** button
 - **PTT** button
 - Volume button
 - Four front panel keys
 - Camera button
 - Audio or tone indications are available using a wired headset (through headset port) or a Bluetooth headset

2.8.1

Turning On Covert Mode


When and where to use: Use this procedure to turn on Covert Mode.

Procedure:

1 Press and hold the **Power** button for at least two seconds.

The following **Power Button** menu displays:

Figure 14: Power Button Menu

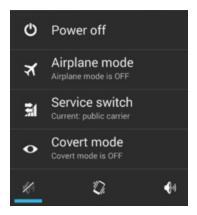

2 Tap Covert mode.

The screen goes blank.

2.8.2

Turning Off Covert Mode


When and where to use: Use this procedure to turn off Covert Mode.

Procedure:

1 Press and hold the **Power** button for at least two seconds.

The following **Power Button** menu displays:

Figure 15: Power Button Menu

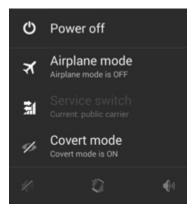

2 Tap Covert mode.

The **Home** screen appears.

2.9

Locking the LEX Series Device

The lock screen automatically displays after predefined time out to prevent unauthorized people from using the device. The device does not lock at the same time as it is suspended. The device can also be locked manually by the user to disable unwanted key presses or screen tap or to keep data secured. To manually lock the device, press and release the **Power** button. When the device is locked and cellular network signal is available, phone calls, notification of new messages, missed calls and upcoming appointments still can be received. The device locks after a specified time.

2.9.1

Selecting a Locking Option

When and where to use: Security dictates a specific level of locking for the LEX L10g. Use this procedure to select a locking option.

Procedure:

- 2 Tap .
- 3 Tap Security.
- 4 Tap Screen lock.

The following options are displayed:

- None.
- Slide User slides the lock to unlock the device.
- Face Unlock User must enter a snapshot of their face to unlock the device.
- Pattern User must replicate a specified pattern to unlock the device.
- **PIN** User must enter a pin to unlock the device.
- Password User must enter a specified password to unlock the device.
- 5 Select an option.

If **None** or **Slide** is selected, the **Security** screen is re-displayed. If **Face Unlock, Pattern**, **PIN**, or **Password** is selected, a face, pattern, pin, or password must be specified. Then, the **Security** screen is re-displayed.

The device is set to lock.

Postrequisites: Specify a face as described in Specifying a Face Unlock on page 47. Specify a pattern as described in Specifying a Pattern on page 48. Specify a pin, or password as described in Specifying a PIN or Password on page 48. Then, specify a timeout value as described in Setting the Timeout for Locking on page 49.

2.9.1.1

Specifying a Face Unlock

Prerequisites: The **Face Unlock** option must be selected for Screen lock.

When and where to use:

Use this procedure to specify a face to unlock your LEX L10g:

Procedure:

- 1 Tap ...
- 2 Tap
- 3 Tap Security.
- 4 Tap Security lock.
- 5 Select Face Unlock.
- 6 Tap Set it up.

- 7 Tap Continue.
- 8 Fit your face in the Show Your Face screen. Center your face in the outlined area marked put your face here. If the Face Unlock setup was successful, you receive a Face Captured screen.
- 9 Tap Continue.
- 10 Choose one of the two backup methods listed; Pattern or PIN.
- **11** For a **Pattern** unlock, slide your finger to connect at least four dots in any pattern of your choosing.
- 12 Repeat the pattern to confirm the choice.
- 13 For a PIN unlock, input a four digit PIN and repeat to confirm.
- 14 Tap OK.

Face Unlock is less secure than a pattern, PIN, or password. Someone who looks similar to you could unlock your phone. The data used to identify your face is kept private on the phone.

The **Security** screen is re-displayed. The photographed face must be entered to unlock the device. To configure the timeout for locking, see Setting the Timeout for Locking on page 49.

2.9.1.2

Specifying a Pattern

Prerequisites: The Pattern option must be selected for Screen lock.

When and where to use: Use this procedure to specify a pattern to unlock your device:

Procedure:

- 1 Tap ...
- 2 Tap 🍳
- 3 Tap Security lock.
- 4 Select Pattern.
- 5 Using a finger, draw a pattern to unlock your device.
- 6 Tap Continue.
- 7 Draw the same pattern again.
- 8 Tap Confirm.

The **Security** screen is re-displayed.

A pattern must be entered to unlock the device.

2.9.1.3

Specifying a PIN or Password

Prerequisites: The PIN or Password option has been selected for Screen lock.

When and where to use: Use this procedure to specify a PIN or password to unlock your LEX L10g:

Procedure:

- 1 Tap [⊕].
- 2 Tap

- 3 Tap Security lock.
- 4 Select PIN or Password.
- **5** Enter a pin or password.
- 6 Tap Continue.
- 7 Enter the pin or password again.
- **8** Tap **OK**.

The Security screen is re-displayed.

A pin or password must be entered to unlock the device.

2.9.1.4

Setting the Timeout for Locking

Prerequisites: Screen lock must be set to Pattern, PIN, or Password.

When and where to use: Use this procedure to set the timeout value to lock the LEX L10g:

Procedure:

- 2 Tap .
- 3 Tap Security.
- 4 Tap Automatically lock.

A list of timeout values is displayed.

- 5 Select a timeout value from the list.
- 6 The **Security** screen is re-displayed.

2.9.2

Unlocking the Device

When the LEX L10g is not used for a period of time and the user tries to access the device, the **Lock** screen displays.

Depending on which Screen lock option is active, the user does one of the following:

- Nothing
- Slide the slider to the unlock position
- Enter and a pattern, pin, password, or display a face.

2.9.2.1

Unlocking the LEX L10g Face Unlock

When and where to use: The Face Unlock option must be selected for Screen lock Use this procedure to unlock your LEX L10g with your face.

Procedure:

1 Press and release the **power** button.

2 Hold your phone at eye level so that your face is within the screen. Once the face is positioned correctly, the device unlocks.



NOTICE: If your face is not recognized by the device, you must enter the backup pattern or pin assigned at setup.

2.9.2.2

Unlocking the LEX L10g Using a Pattern

When and where to use: Use this procedure to unlock the LEX L10g with a pattern:

Procedure:

- 1 Press and release the **Power** button.
- **2** Using a finger, draw the specified pattern on the screen. Once the correct pattern is drawn, the device unlocks.

2.9.2.3

Unlocking the LEX L10g Using a PIN or Password

When and where to use: Use this procedure to unlock the LEX L10g with a PIN or password.

Procedure:

- 1 Press and release the Power button.
- 2 In the text field, enter your pin or password.
- 3 Tap Done.

The device unlocks and the **Home** screen is shown.

2.9.3

Calling Emergency from a Locked LEX L10g

You can make an emergency call even when the LEX L10g is locked and you do not remember the PIN.

When and where to use: Use this procedure to make an emergency call when the device is locked and you do not remember the PIN:

Procedure:

- 1 Tap **EMERGENCY CALL** at the bottom of the lock screen.
 - The Emergency Dialer screen displays.
- 2 Enter the emergency number.
- 3 Tap .

2.10

Setting the Date and Time

When the LEX L10g is connected to cellular network, date and time are automatically synchronized.

When and where to use: Perform this procedure to manually set the date and time:

Procedure:

- 1 Tap ...
- 2 Tap <equation-block>
- 3 Tap Date & time.
- 4 Tap Automatic date & time to disable automatic date and time synchronization.
- **5** Tap **Automatic time zone** to disable automatic time zone synchronization.
- 6 Tap Set date.
- 7 Slide your finger up and down to select the month, date and year.
- 8 Tap Done.
- 9 Tap Set time.
- 10 Slide your finger up and down to select the hour, minutes and part of the day.
- 11 Tap Done.
- 12 Tap Select time zone.
- 13 Tap to select a time zone from the list.
- **14** Tap 🗀.

2.11

Setting the Display

The following LEX L10g display features can be customized:

- Brightness Set the brightness of the display.
- Wallpaper Choose a background type on the Home and lock screens. Three options are available: Gallery, Live Wallpapers, and Wallpapers.
- Auto-rotate Set the content to rotate automatically when the device is turned.
- Sleep Set the length of time the device waits before turning off the display's backlight.
- Daydream Set the device to launch a screensaver when the device is docked inside a cradle or charging.
- Font size Change the font size for display text.
- Cast screen Enable the device to project the screen to a TV or other device.

2.11.1

Setting Screen Brightness

When and where to use: Use this procedure to set the screen brightness.

Procedure:

- Tap [™].
- 2 Tap <equation-block>
- 3 Tap Display.
- 4 Tap Brightness.

- **5** Tap **Automatic brightness** to set the device to automatically adjust the brightness using the built-in light sensor. Use the slider to set a brightness level.
- 6 Tap 🗀.

2.11.2

Setting Up Wallpapers

When and where to use:

Wallpaper is the background on the Home and lock screens. You can change and set the image on the device. Choose between traditional or live (animated) types. Traditional wallpaper can be any image, such as a picture you've taken and stored in the Gallery app or an image provided by the manufacturer for wallpaper use.

Procedure:

- 1 Tap [⊕].
- 2 Tap 🔯
- 3 Tap Display.
- 4 Tap Wallpaper and choose a wallpaper type. Three options are available:

If	Then
For a still image from the Gallery app,	Tap Gallery , browse the albums, select an image, and tap Select wallpaper .
For animated or interactive wallpaper,	Tap Live Wallpapers , select a wallpaper to preview, and tap Set wallpaper .
For a preinstalled image,	Tap Wallpaper, browse the scroll-bar and select an image, and tap Set wallpaper.

2.11.3

Setting Screen Rotation

Screen rotation enables the LEX L10g to automatically determine the orientation of the screen to portrait or landscape.

When and where to use: Use this procedure when you want to set your screen to automatically rotate:

Procedure:

1

NOTICE: Some applications may not support screen rotation.

Тар 🕮.

2 Tap

- 3 Tap Display.
- 4 Check Auto-rotate screen to automatically switch orientation when the device is rotated.

NOTICE: The Home screen does not rotate.

5 Tap

2.11.4

Setting Up Sleep Mode

Use this procedure to set up sleep mode (screen time-out).

Procedure:

- 2 Tap <equation-block>
- 3 Tap Display.
- 4 Tap Sleep.
- 5 Select one of the sleep values:
 - 15 seconds
 - 30 seconds (default)
 - 1 minutes
 - 2 minutes
 - 5 minutes
 - 10 minutes
 - 30 minutes
- 6 Tap 🗀.

2.11.5

Setting Up Daydream

When and where to use: The Daydream application behaves as a screensaver when the LEX L10g is docked inside a cradle and/or in sleep mode. Use this procedure to set up a screensaver.

Procedure:

- 1 From the **Home** screen, tap
- 2 Tap 🔯.
- 3 Tap Display.
- 4 Tap Daydream.
- 5 Select from Clock, Colors, Photo Frame or Photo Table.
- 6 Tap = to configure the item selected in the previous step.
- 7 Tap WHEN TO DAYDREAM and select when you would like the feature to be active (While docked, while charging or either).
- 8 Tap **START NOW** to preview and confirm your selection.
- 9 Tap ...

2.11.6

Setting the Font Size

When and where to use: Use this procedure to change the font size.

Procedure:

- Tap [™].
- 2 Tap 🔯
- 3 Tap Display.
- 4 Tap Font size.
- 5 Select one of the font size values:
 - Small
 - Normal (default)
 - Large
 - Huge
- 6 Press a.

2.11.7

Enabling Cast Screen

When and where to use: Use this procedure to enable the LEX L10g to project the screen to a TV or other device.

Procedure:

- 2 Tap .
- 3 Tap Display.
- 4 Tap Cast screen.
- **5** Tap ...
- 6 Select Enable wireless display.

2.11.7.1

Projecting the LEX L10g Screen on Another Device

Prerequisites: The Cast screen must be enabled.

When and where to use: Use this procedure to project the device screen on another device.

Procedure:

- 1 From the **Home** screen, tap
- 2 Tap .
- 3 Tap Display.
- 4 Tap Cast screen.

- 5 Select the device to show your device screen on.
 Your device should now display on the other device.
- 6 To stop projecting your device screen, swipe down from the **Status** bar and tap **Disconnect** under **Cast screen**.

2.12


General Sound Setting

Use the **Sounds** settings to configure media and alarm volumes.

On the **Home** screen, tap \longrightarrow \longrightarrow **Sound**.

Alternately, open the **Notification** panel and tap \longrightarrow **Settings** \rightarrow **Sound**.

Figure 16: Sound Screen

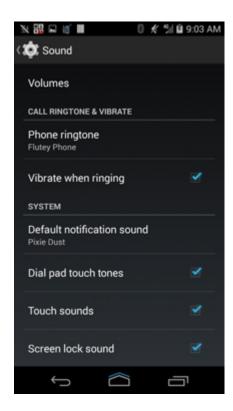


- Volumes Use to change the volume of media, ringtones, notifications, and alarms.
- Call Ringtone and Vibrate
 - **Phone ringtone** Tap to select a ringtone to sound when an incoming call is received.
 - Vibrate when ringing Check to make the device vibrate when a call is received.



NOTICE: Setting volume can also be done by pressing the **Volume** button, up and down, during a call, or while playing music or a video. When not on a call, pressing the **Volume** button all the way down to set the device to vibrate. During an in-coming call, pressing the **Volume** button up and down changes the ringtone volume.

Figure 17: Volume Button

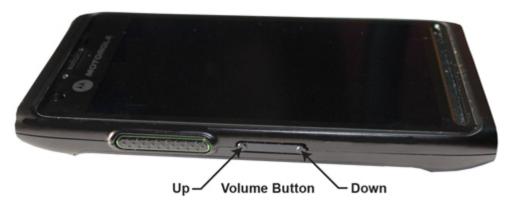

System

- **Default notification sound** Tap to select a sound to play for all system notifications.
- **Dial pad tap tones** Check to play a sound when a device key is touched.
- **Touch sounds** Check to play a sound when making screen selections.
- Screen lock sounds Check to play a sound when locking and unlocking the screen.
- Vibrate on tap Check to have the device vibrate when touching soft keys and on certain screen interactions.
- **Emergency tone** Select and check **Alert** to play a tone or **Vibrate** when an emergency notification is received. Select **Off** to disable emergency notification.

2.13

Public and Private Carrier Modes

The device operates on both public and private carriers.

The user can manually switch modes to operate on the Private Mode LTE network or the Public Carrier Mode.

The LEX L10g Mission Critical LTE Handheld operates on both public and private carriers.

- Private Mode LTE B14
- Public Mode LTE B4 and B13, CDMA EVDO Rev. A (Band 0, Band 1) 3G, 1X

2.13.1

Switching Modes Using the Power Button

When the LEX L10g is equipped with Private and Public SIM cards, the **Power** button can be used to switch modes.

Prerequisites: The device is equipped with Private and Public enabled SIM cards.

When and where to use: Use this procedure to switch modes using the power button.




NOTICE: You may need to switch between private and public network modes when you want to use capabilities provided by one network that are not provided by the other. For example, if the phone is in private mode, switch to public mode before you can dial numbers that are not included in the private network.

Procedure:

1 Press and hold the **Power** button until a menu appears.

Figure 18: Service Switch

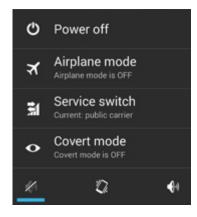

The current carrier mode is indicated under the **Service switch** option.

2 Tap Service switch.

A confirmation popup is displayed.

Figure 19: Switch Networks Confirmation Popup



3 Tap Switch.

2.13.2

Switching Modes Using the Settings App

When the LEX L10g is equipped with Private and Public SIM cards, the **Settings** application can be used to switch modes.

Prerequisites: The device is equipped with Private and Public enabled SIM cards.

When and where to use: Use this procedure to switch modes using the setting applications.



NOTICE: You may need to switch between private and public network modes when you want to use capabilities provided by one network that are not provided by the other. For example, if the phone is in private mode, switch to public mode before you can dial numbers that are not included in the private network.


Procedure:

- 2 Tap .
- 3 Tap More....
- 4 Tap Mobile networks.
- 5 Tap Select network.

6 Select Public or Private.

A confirmation popup is displayed.

Figure 20: Switch Networks Confirmation Popup

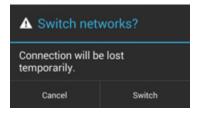

7 Tap Switch.

2.14

Emergency Button

The LEX L10g includes an **Emergency Button** which aids responders during emergencies. This feature helps reduce response times in an emergency situation.

The device must be pre-configured based on the responder's specific requirements before it is given to a user. Once the device is configured to use the **Emergency Button**, users can access the actions by swiping the **Home** screen icon up to access the **Home** screen overlay.

The **Emergency Button** supports the following actions:

- Initiate a phone call The **Emergency Button** can be pre-configured to initiate an E911 call or to initiate a call to a customized phone number.
- Send an SMS notification (with/without GPS) The Emergency Button can be pre-configured to send an SMS notification to customized numbers. Location coordinates (if available) of LTE handset and information about paired (if paired) Land Mobile Radio (LMR) is also sent as part of the text message.
- Initiate a phone call and send an SMS notification (with/without GPS) The **Emergency Button** can be pre-configured to perform both of the above actions.



NOTICE: You are required to have a voice and text plan to initiate calls and send SMS notifications.

Chapter 3

Using the LEX Series Device

This chapter explains the indicators, buttons, status icons, and controls on the device and provides basic instructions for using the device.

3.1

Using the Touchscreen

The multi-tap sensitive screen is used to operate the LEX L10g.

Table 3: Using the Touchscreen


Action	Result
Тар	Tap to:
	 select items on the screen
	 type letters and symbols using the on-screen keyboard
	 press on-screen buttons
Tap and Hold	Tap and hold:
	 an item on the Home screen to move it to a new location or to the trash
	 an item in Apps to create a shortcut on the Home screen
	 an empty area on the Home screen until the menu appears
Drag	Tap and hold an item for a moment and then move finger on the screen until reaching the new position.
Swipe	Move finger up and down or left and right on the screen to:
	 unlock the screen
	 view additional Home screens
	 view additional application icons in the Launcher window
	 view more information on an application's screen
Double-tap	Tap twice on a web page, map, or other screen to zoom in and out.
Pinch	In some applications, zoom in and out by placing two fingers on the screen and pinching them together (to zoom out) or spreading them apart (to zoom in).

Using the On-Screen Keyboard

The on-screen keyboard is used to enter text in a text field.

To configure the keyboard settings, tap and hold (comma key) > slide your finger up to and then select **Android Keyboard Settings**.

Figure 21: Android Keyboard Settings

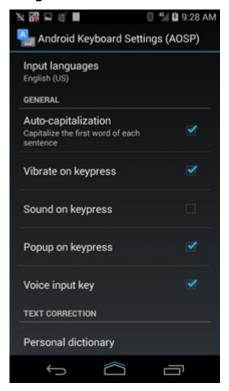

A description of the settings can be found in Android Keyboard Settings on page 61.

Editing Text

Edit entered text and use menu commands to cut, copy, and paste text within or across applications. Some applications do not support editing some or all of the text they display; others may offer their own way to select text.

Entering Numbers, Symbols and Special Characters

To enter numbers and symbols:

- Without switching to the **Numbers** or **Symbols** keyboard, tap and hold one of the top-row keys until a menu appears then select a number. Keys with alternate characters display an ellipsis (...) below the character.
- Tap the **Shift** key to enter one capital letter.
- Tap and hold the Shift key until it changes state (Shift key is underlined) to enter two or more capital letters. Tap Shift key again to return to the lowercase keyboard.
- Tap 1122 to switch to the numbers and symbols keyboard.
- Tap the key on the numbers and symbols keyboard to view additional symbols.

To enter special characters, tap and hold a number or symbol key to open a menu of additional symbols.

- A larger version of the key displays briefly over the keyboard.
- Keys with alternate characters display an ellipsis (...) below the character.

3.2.1

Android Keyboard Settings

The Android Keyboard Settings may be personalized to meet your preferences.

Table 4: Android Keyboard Settings

Setting	Description
GENERAL	
Input Languages	Selects the language used in the keyboard.
Auto-capitalization	Automatically capitalize the first letter after a period.
Vibrate on keypress	Vibrates the device when a key is pressed.
Sound on keypress	Makes a sound on the device when a key is pressed.
Popup on keypress	Pops up a duplicate of the key pressed.
Voice input key	Allows you to speak the name of the key to input a key.
TEXT CORRECTION	
Personal Dictionary	Uses your personal dictionary when correcting words.
Add-on dictionaries	Allows you to add additional dictionaries to correct words.
Block offensive words	Blocks offensive words from being suggested to correct words.
Auto-correction	Sets the level of auto-correction to: Off, Modest, Aggressive, or Very aggressive.
Show correction suggestions	Displays a list of corrections so that you can select make a selection.
OTHER OPTIONS	
Next word suggestions	Anticipates the next word that you want to type based on the last word typed.
Advanced settings	The Advanced settings should only be set by experts.

3.3

Motorola Solutions Home Experience


The Motorola Solutions Home Experience (MHx) is a user interface available for the LEX L10g. Specifically, MHx provides a unique experience for customizing the **Home** screen. Download Motorola Solutions Home Experience (MHx) from the Google Play Store.

3.3.1

LEX L10g Home Screen

The **Home** screen displays after the device turns on and unlocks.

Figure 22: Default Home Screen

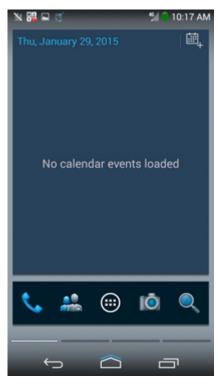

The **Home** screen is completely customizable depending on the specifications for your agency. Each organization may have a different **Home** screen. The Radio Manager (RM) Tool, described in the *LEX L10g Service Provisioning Guide*, can be used to stage the **Home** screen on your devices.



NOTICE: When CRYPTR Card is used, the device requires setting a password after initial boot and entering this password whenever the device restarts. This is not a password to access the device but a password to protect Motorola Solutions secure applications.

After suspend mode or screen time-out, the screen displays with the lock slider. Slide in any direction towards the outside of the screen to unlock the screen.



NOTICE: If you have changed the **Screen lock** option, depending on the selected option, you will have to enter a pattern, pin, or password to unlock the device.

The **Home** screen consists of the following items:

- Core Applications Widget Provides shortcuts such as:
 - Phone Dialer
 - Contacts
 - Application Launcher
 - Camera
 - Search Feature
 - Other shortcuts determined by your agency
- Calendar Widget
- · email Widget

- Messaging Widget
- Search Widget
- My Apps Widget
- Other Widgets determined by your agency
- Home Screen Overlay Provides quick access to core functions.

The **Home** screen provides four screens for placement of widgets and shortcuts. Swipe the screen left or right to view the additional screens.

3.3.1.1

Home Screen Overlay

The **Home** screen overlay provides quick access to core functions (**Emergency Button**). Swipe the **Home** screen up from the icon to access the **Home** screen overlay.

3.3.2

Customizing the Home Screen

The **Home** screen contains panels that can be accessed by swiping the page to the left or right. Panels provide more space for adding widgets to the **Home** screen and can be customized by the user.

This section describes how to:

- Add Widgets
- · Move Widgets
- · Remove Widgets
- Configure Home screen settings

3.3.2.1

Adding Widgets

Widgets are applications that run on your **Home** screen.

When and where to use: Use this procedure to add one or more widgets to your Home screen.

Procedure:

- 1 Swipe the **Home** screen left or right to locate the panel that you want to add a widget to.
- 2 Touch and hold a gray area of the panel until you see the following icons near the bottom of the screen:



3 Tap the Widgets icon to reveal the widgets.

Figure 23: Widgets Screen






NOTICE: To identify Motorola Solutions Widgets, their names are preceded by **MHx**.

- 4 The **Widgets** screen contains multiple panels. Swipe the **Widgets** screen left or right to locate the widget that you want to add.
- **5** Touch and hold the widget; then, slide the widget down the screen and place it in the current panel.

If there is not enough room in the panel or you want to place the widget in a new panel, slide the widget to the right of the screen until a blank panel appears. Then, place the widget in the new panel.



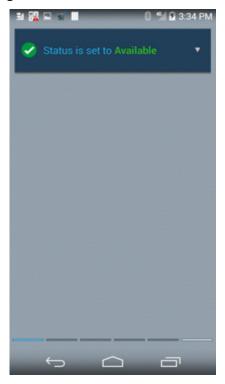



NOTICE: Some widgets are re-sizable as soon as you place it in a panel. Press and hold the widget. If the re-size tool displays (four dots, one on each side of the widget), you can re-size the widget by dragging the dots on the re-size tool.

3.3.2.1.1

Adding Shortcuts to the My Apps Widget

The My Apps widget is a special MHx widget where you can add shortcuts for quick access.

Prerequisites: Before adding shortcuts, the My Apps widget must be added to the Home screen.

When and where to use: An empty My Apps needs shortcuts to be functional. Use this procedure to add shortcuts to the My Apps widget.

Procedure:


1 Add My Apps widget as described in Adding Widgets on page 63.
An empty My Apps widget displays.

Figure 25: Empty My Apps Widget



2 Tap the My Apps widget to add shortcuts to it. A screen with a list of shortcuts is displayed.

Figure 26: List of Shortcuts for My Apps Widgets

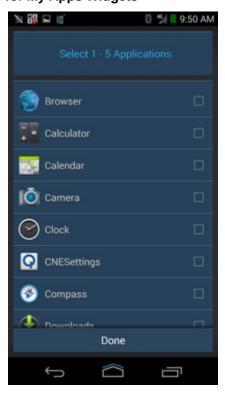

- 3 Select each shortcut that you want to add to the My Apps widget. You may add up to five shortcuts.
- 4 Tap Done.

Shortcuts are added to the **My Apps** widget.

Figure 27: My Apps Widget with Shortcuts Added



3.3.2.1.2

Changing My Status

When and where to use: Perform this procedure to set the status of the LEX L10g user to either Available or Busy. No matter what the status is set to, calls are still received. This status is shown to other users.



NOTICE: The **My Status** widget must be added before it is visible in the **Home** screen. The **My Status** widget is used in conjunction with the UNS System from Motorola Solutions or when you have WAVE 7000. One of these systems must be active before **My Status** will work properly.

Procedure:

1 Tap the **My Status** dropdown menu.

Figure 28: My Status Widget



The My Status options menu is displayed.

Figure 29: Status Selection



2 Tap one of the status states.
Status is immediately set to the selected state.

3.3.2.2

Moving Widgets

When and where to use: Use this procedure to move (relocate) widgets on the Home screen.

Procedure:

- 1 Navigate to the **Home** screen panel where the widget is located.
- 2 Touch and hold the widget; then, slide the widget to a new location.

 If you want to move the widget to another panel, slide the widget left or right to that panel; then slide the widget to a location in the panel.

3.3.2.3

Removing Widgets

When and where to use: Use this procedure to remove or clear space on your Home screen.

Procedure:

- 1 Slide the **Home** screen panel until you locate the panel that holds the widget that you want to remove.
- 2 Touch and hold the widget while sliding it down to the bottom of the panel.
 - **X Remove** appears near the bottom of the screen.
- 3 Slide the widget to **X** Remove until the widget turns red and your finger is directly above **X** Remove; then, release the widget.

The widget is removed from the panel.




NOTICE: The widget is only removed from the panel. It is not deleted from the LEX L10g.

3.3.2.4

Example of a Customized Home Screen Panel

This topic shows you an example of a customized **Home** screen panel.

Figure 30: Example of a Customized Home Screen Panel

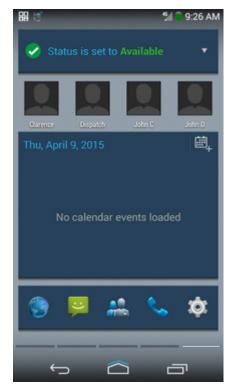

The above figure shows a customized **Home** screen panel with the following widgets:

- My Status
- Two Direct dial widgets
- Calendar
- My Apps

3.4

Status Bar

The **Status** bar displays the time, notification icons (left side) and status icons (right side).

Figure 31: Status Bar



If there are more notifications than can fit in the **Status** bar, it is indicated that more notifications exist. Open the **Notifications** panel to view all notifications and status.

Notification Icons

Notification icons alert you when a notification has been received.

Table 5: Notification Icons

Icon	Description
a	Indicates that more notifications are available for viewing.
0	Indicates that data is syncing.
¥e	Indicates an incoming email.
	Converged Services notification. This icon has four parts: location services (top left), radio services (top right), priority manager (bottom left), and presence service (bottom right).
	Converged Services error notification. The triangle with the exclamation point inside indicates an error. If an error is observed, the user can swipe down from the icon to reveal the error. An example is: Error: Unknown Proxy hostname
•	Indicates location reporting service is enabled.
\$	Indicates the device is searching location data.
♦	Indicates an error or a warning that requires user action in the location application.
<u>1:</u>	Indicates an error or a warning that requires user action in the presence application.
£	CRYPTR feature error.
1	Indicates an upcoming event.
\$	Indicates an open Wi-Fi network is available.
	Radio Services application is on.
D.	Indicates a song is playing.
<u>₽</u> <u>†</u>	Indicates a problem with sign-in or sync has occurred.
<u>†</u>	Indicates the device is uploading data.

Table continued...

Icon	Description
. O:	Indicates the microSD card is almost full.
<u>+</u>	Indicates the device is downloading data when animated and download is complete when static.
Ψ	Indicates the device is connected via USB cable.
-	Indicates the device is connected to or disconnected from virtual private network (VPN).
nhh ☆	Preparing SD card.
!	Indicates no SIM is installed.
	Indicates the USB debugging is enabled on the LEX L10g.
·	Indicates the device has received a text message.
č	Indicates a missed call.
Ψ	Indicates tethering is active for Bluetooth or USB. Also used to indicate a Wi-Fi hotspot is active.
	Screenshot captured.
□ ○	Indicates that Wi-Fi hotspot is active.
⊘	My Status indicates device is available.
	My Status indicates device is busy.

Status Icons

Status icons give you status information on actions occurring on your LEX L10g.

Table 6: Status Icons

Icon	Description
•	Indicates that GPS is in use.
	Indicates the device is searching location data.

Table continued...

Description
Indicates the Alarm is active.
Indicates all sounds except media and alarms are silenced and vibrate mode is active.
Indicates the ringer is silenced.
Microphone is muted during a call.
Indicates the battery is fully charged.
Indicates the battery charge is low.
Indicates the battery charge is critical.
Indicates the battery is charging.
Indicates the Airplane Mode is active. All radios are turned off.
Indicates Bluetooth is on.
Set to operate on Private network.
Connected to a Wi-Fi network.
No Wi-Fi signal.
Mobile network signal strength.
No mobile network signal.
Connected to a 4G network.
Connected to a 3G network.
Roaming from a network.
No SIM card installed.


Managing Notifications

Notification icons report the arrival of new messages, calendar events, alarms, and ongoing events.

When a notification occurs, an icon appears in the **Status** bar with a brief description. See Notification Icons on page 70 for a list of possible notification icons and their description. Open the **Notifications** panel to view a list of all the notifications.

To open the **Notification** panel drag the **Status** bar down from the top of the screen.

Figure 32: Notification Panel

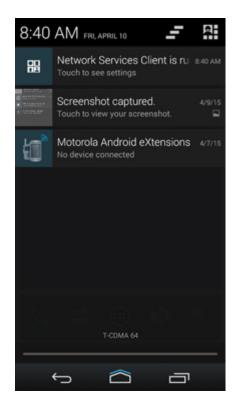

To respond to a notification, open the **Notifications** panel and then tap a notification. The **Notifications** panel closes and the subsequent activity is dependent on the notification.

To clear all notifications, open the **Notifications** panel and tap **-**. All event-based notifications are removed. Ongoing notifications remain in the list.



NOTICE: Some notifications cannot be cleared and will remain to inform you of running applications

To close the **Notifications** panel, drag the bottom of the **Notifications** panel to the top of the screen or tap —.

3.8

Working with Status

LEX L10g users work with status in two ways: setting their own status (Available or Busy) and viewing the status of their contacts.

The status displayed for **Contacts** shows the following:

- The presence status currently detected by a call system or network (offline or online status)
- The availability status currently selected by the contact (Available or Busy)

My Status

Set the value of **My Status** to **Available** or **Busy**. This status is shown in the **Contacts** and **Session Log** screens of other users. The **Available** status:

- Is the default "sign-on" state
- Indicates the user is willing to send and receive calls

The **Busy** status indicates that the user is busy but the is still able to send and receive calls.

Status of Contacts

The status of contacts is shown in all of the **Contacts** screens, and **People** list. The status of a contact can be:

- Offline
- Available
- Busy

If the contact is not connected to and registered with a system server, the status shown is Offline.

If the contact is connected to and registered with the system server, the **My Status** value (Available or Busy) of the contact is shown.

When the **Contacts** are synchronized with the **People** list, the **Contacts** are added to the regular device contacts.

3.9


Quick Settings

The **Quick Settings** panel provides easy access to some frequently used settings.

You can use one of two methods:

- With two fingers, drag the Status Bar panel down to display the Quick Settings panel.
- Drag the **Status Bar** down from the top of the screen. The **Quick Settings** icon displays in the top right corner. Tap to display the **Quick Settings** panel.

Figure 33: Quick Settings Panel

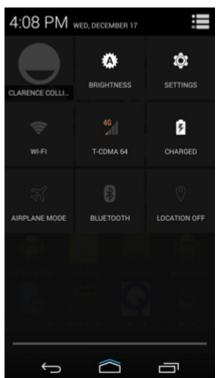

- Display the owner's contact image. Tap to open the owner's contact information.
- Brightness Opens the Brightness setting dialog box to set the screen brightness.
- Settings Opens the Settings screen.

- Wi-Fi Displays the current Wi-Fi connection. Tap to open the Wi-Fi settings screen.
- Service Displays the current cellular service used; public or Private.
- Battery Status Displays the current battery charge level. Tap to open the Battery screen.
- **Airplane Mode** Displays the Airplane mode status. Tap to toggle Airplane mode on and off. Turn on Airplane mode to turn off all the radios.
- **Bluetooth** Displays the current state of the Bluetooth radio. Tap to open the **Bluetooth** settings screen.
- Location Displays the current state.

To close the **Quick Settings** panel, drag the bottom of the **Quick Settings** panel to the top of the screen or tap —.

3.10

Applications

The **Apps** screen displays icons for all installed applications.

Table 7: Applications

Description
Calculator — Provides the basic and scientific arithmetic functions.
Google Calendar — Use to manage events and appointments. Allows synchronization with Google account calendar.
Camera / Video Recorder — Take photos or record videos. For more information, see Camera on page 111.
Google Chrome — Use to access the Internet or agency intranet.
Clock / Alarms — Use to set an alarm, stopwatch, or timer.
Downloads — Lists all downloads files.
Google Drive — Access to files anywhere through secure cloud storage and file backup for your photos, videos, files and more.
Email — Use to send and receive email.
File Browser - Use to view and manage files.
Gallery — Use to view photos stored on the microSD card. For more information, see Gallery on page 119 for more information.

Table continued...

Icon	Description
M	Gmail — Use to send and receive email.
8	Google Search — The fastest, easiest way to find what you need on the web and on your device.
G	Google Settings — Access to settings and tools for managing your Google experience on products like Search and Maps.
9	Hangouts — bring conversations to life with photos, emoji, and even group video calls for free.
<u> </u>	Keep — Capture what's on your mind and get a reminder later at the right place or time.
G	Google Maps — Find local businesses, view maps and get driving directions.
"	Messaging — Send SMS and MMS messages. See Messaging on page 105 for more information.
	Motorola Device Management — Enables staging and management of the device for initial use by initiating the deployment of settings, firmware, and software from a server. For more information, see the LEX L10g Service Provisioning Guide.
	Motorola TechDocs — Use to view device ondevice documentation.
	MVPN — Enables the Motorola Solutions Mobile VPN (MVPN).
A 9	People — Use to manage contact information.
6	Phone — Use to make phone calls. See Calling on page 81 for more information.
	Play Movies & TV — Allows you to watch movies and TV shows purchased or rented on Google Play.
CO CO	Play Music — Access music stored on the device.
<u>></u>	Play Store — Google's official store and portal for Android apps, games, and other content for your Android-powered phone.
	Protection Log — 2-Step Verification, you'll protect your account with both your password and your phone.

Table continued...

Icon	Description
Conflect Parties Ten Talk	Push-To-Talk — Enables Push-to-Talk services over a broadband network and interconnected to Project 25 Land Mobile Radio (LMR) networks to enable PTT interoperability between broadband and P25 radio users (available only if PTT application is installed and activated on the LEX 10ig).
CCCC CCCC	Radio Management Link Client — Enables connecting the device to a remote host computer for staging, firmware installation, application installation, and application removal by technical support. See the <i>Radio Management Online Help</i> for more information on the RM Tool.
TÔI:	Settings — Use to configure the device.
	Software Licensing — Licensing for software installed on the device.
G	Translate — Online language translation service instantly translates text and web pages.
	YouTube — View videos and music, upload original content, and share with friends, family, and the world

3.11

Folders

Use **Folders** to organize similar applications together. Tap the folder to open and display items in the folder.

3.11.1

Creating a Folder

When and where to use: Use a procedure to create a folder on the **Home** screen.



NOTICE: There must be a minimum of two app icons to create a folder.

Procedure:

- 1 Go to the desired **Home** screen.
- 2 Tap and hold on one application icon.
- 3 Drag the icon and stack on top of another icon.
- 4 Lift and release.

3.11.2

Naming Folders

When and where to use: Use this procedure to name folders. You can give folders a name after they are created.

Procedure:

1 Tap the folder.

Figure 34: Opened Unnamed Folder



- 2 Tap the title area and enter a folder name using the keyboard.
- 3 Tap Done.
- 4 Tap anywhere on the **Home** screen to close the folder.

The folder name appears under the folder.

Figure 35: Named Folder



3.11.3

Removing a Folder

When and where to use: When a folder is no longer needed, you can remove it. Use this procedure to remove a folder.

Procedure:

- 1 Tap and hold the folder until it enlarges and the device vibrates.
- 2 Drag the folder to X Remove until the folder turns red; then release.

The folder is removed from the screen.

3.12

Accessing Files from a Computer

When and where to use: Use this procedure to allow access to files from your computer using MTP (media device) or using PTP (camera software).


Procedure:

1 Connect the device to your computer using a USB cable.

If one of the following messages is displayed in the notification area (top of screen): **Connected** as a media device or **Connected** as a camera, you already have access to the files on your device.

2 Swipe down from the Status Bar.

Figure 36: Notifications Screen

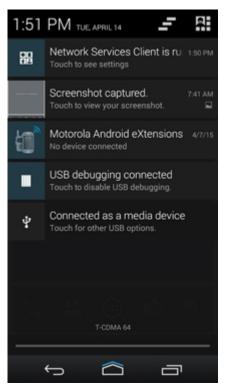

3 Tap the notification that has a **Touch for other USB options** subtitle (in this case **Connected** as a media device).

Figure 37: MTP / PTP Selection Screen



- 4 Select **Media device (MTP)** to access media files from a Windows computer or **Camera (PTP)** to access photos / files on a computer that does not support MTP.
- 5 Tap to return to the previous screen.

Chapter 4

Calling

Make a phone call from the **Phone** application, the **People** application, or other applications or widgets that display contact information.

4.1

Making a Call Using the Dialer

When and where to use: Use this procedure to make a call using the dialer tab to dial phone numbers.

Procedure:


1 On the **Home** screen, tap

Figure 38: Dialer Screen



- 2 Tap the tab above the dialer.
- 3 Tap the keys to enter the phone number.
- 4 Tap below the dialer to initiate the call.

Figure 39: Call in Progress

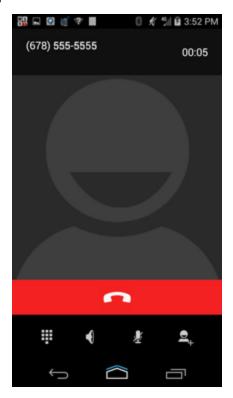

If	Then
You want to display the dialer.	Тар 🧸.
You want to turn on the speakerphone.	Тар 🚺.
You want to mute the call.	Тар 🖟.
You want to add another person to the call.	Tap 🕰.

5 Tap to end the call.

4.2

Making a Call Using People List Contacts


When and where to use: Use this procedure to make a call using people list contacts to initiate a call.

Procedure:

- 1 On the **Home** screen, tap **\lambda**.
- 2 Tap the tab.
- **3** From the people list contacts, tap a phone contact or a PTT contact for making a One-to-One Private or Alert Call .

MN002858A01-A Chapter 4: Calling

Figure 40: People List Contact

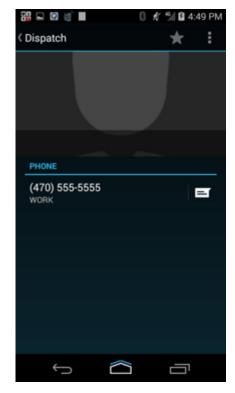

- 4 Tap the phone number next to the contact to initiate the call.
- 5 Tap to end the call.

4.3


Making a Call Using Call History

When and where to use: Use this procedure to make a call using call history. Call History is a list of all the calls placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to Contacts.

Procedure:

- 1 On the **Home** screen, tap **\sqrt{s}**.
- 2 Tap the tab.

Figure 41: Call History Tab

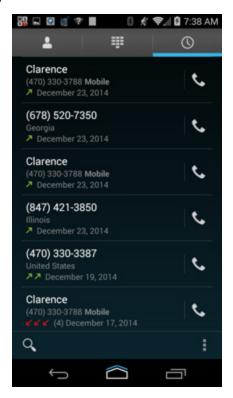

- 3 Tap next to the contact to initiate the call.
- 4 Tap to end the call.

Example:

Arrow icons beside a call indicate the type of call. Multiple arrows indicate multiple calls:

- — Missed incoming call
- Z Received incoming call
- Outgoing call

4.4

Making a Conference Call

When and where to use: Conference calling is available if you have two or more people you wish to have a conversation with at the same time. Use this procedure to create a conference phone session with multiple people.




NOTICE: Conference calling may not be supported by your service provider. Check with your technical support for conference calling availability. The total number of conference call participants may be limited by your service provider. For the maximum number of participants in a conference call, contact technical support.

Procedure:

- 1 On the **Home** screen, tap
- 2 Tap the **#** tab above the dialer.
- 3 Tap the keys to enter the phone number.


- 4 Tap below the dialer to initiate the call.
- 6 Tap the keys to enter the second phone number.
- 7 Tap below the dialer to initiate the call.
- 8 When the call connects, the first call is placed on hold and the second call is active.

Figure 42: Two Calls

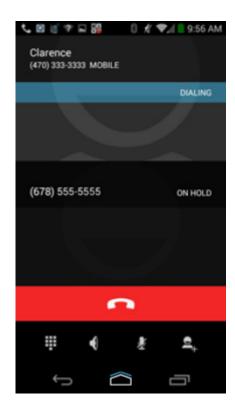


The screen quickly changes to:

Figure 43: Two Calls Connected

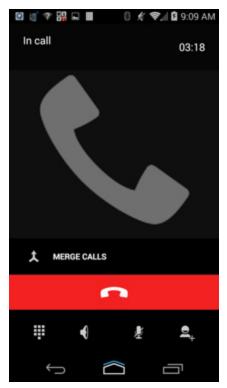

9 Tap AMERGE CALLS to create a conference call with three people.

Figure 44: Merged Calls

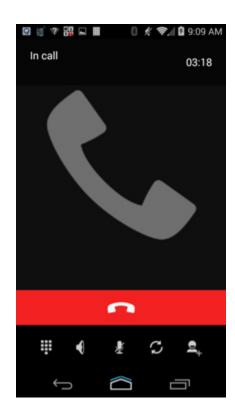

10 Tap at to add another call.

The conference is placed on hold.

- 11 Tap the keys to enter the second phone number.
- 12 Tap below the dialer to initiate the call.
- 13 Tap A MERGE CALLS to add the third call to the conference.
- 14 Tap 2 to rotate between the individual calls.

Calls are rotated starting with the first call. This allows you to speak privately to one party. Tap

to rotate to the next party. When the rotation is complete, you are placed back into conference mode and all calls are active.

4.5

Answering Calls with a Bluetooth Headset

When you receive a phone call, the **Incoming Call** screen opens, displaying the caller ID and any additional information about the caller that is in the **People** application.



NOTICE: To connect a Bluetooth headset to the LEX L10g, see Connecting to a Bluetooth Device on page 147.

When a call arrives, tap the Call button on the Bluetooth headset to answer the call.

To silence the ringer before answering the call, press the volume down button on the side of device.

To end the call press the Call button on the Bluetooth headset.

All incoming calls are recorded in the **Phone** application call **Logs** tab. If you miss a call, you will receive a notification.

4.6

Call Settings

Use the **Call Settings** to modify options related to the phone call feature.



NOTICE: Not all options are available for all configurations.

- · Ringtone & Vibrate
 - Phone Ringtone Tap to select a ringtone to sound when an incoming call is received.
 - Vibrate When Ringing Check to make the device vibrate when a call is received.
- Other Call Settings
 - **Ringtone Settings** When using a Bluetooth headset, select the path that the ring is heard. Options: **Bluetooth** or **Speaker and Bluetooth** (default).



NOTICE: Bluetooth headset connection is required to set this option.

- Voicemail Tap to configure voicemail settings:
 - + **Service** Set the service provider or other provider for voicemail service.
 - + **Setup** Tap to update the phone number used to access voicemail.
 - + **Sound** Tap to select a sound when a voicemail is received.
 - + Vibrate Tap to vibrate when a voicemail is received.



NOTICE: If using a Verizon SIM card on LEX L10g device, Visual Voicemail feature is not supported. To resolve visual voicemail issue, see Resolving Visual Voicemail for LEX L10g on page 88.

- **Dial pad touch tones** Check to play a sound when a phone key is touched.
- Quick Responses Tap to edit quick responses to use instead of answering a call.
- **Fixed Dialing Numbers** Use Fixed Dialing to restrict the phone to dial only the phone number(s) or area code(s) specified in a **Fixed Dialing** list.
- TTY mode Tap to set the TTY setting. Use an optional teletypewriter (TTY) device with the LEX L10g to send and receive calls. Plug the TTY device into the device headset jack and set the device to operate in one of the TTY modes.



NOTICE: Use a TSB-121 compliant cable (provided by the TTY manufacturer) to connect the TTY device to the LEX L10g.

Set the device volume to a middle level setting for proper operation. If you experience a high number of incorrect characters, adjust the volume as needed to minimize the error rate.

For optimal performance, the device should be at least 30 cm (12 inches) from the TTY device. Placing the device too close to the TTY device may cause high error rates.

- + **TTY Off** (default) TTY is off.
- + TTY Full Transmit and receive TTY characters.
- + TTY HCO Transmit TTY characters but receive by listening to earpiece.
- + **TTY VCO** Receive TTY characters but transmit by speaking into microphone.
- DTMF tones Set the length of the DTMF tones. Available options are: Normal or Long.
- CDMA Call Settings:
 - + Voice privacy Enable enhanced privacy mode.

4.6.1

Resolving Visual Voicemail for LEX L10g

When and where to use:

If a Verizon SIM card is used in the LEX L10g and Visual Voicemail is enabled on your Verizon account, use this procedure to turn off Visual Voicemail (which is not supported by the LEX L10g). Non-visual voicemail will not work properly until you complete this procedure.

Procedure:

- 1 Contact Verizon and have them turn **OFF** Visual Voicemail feature.
- 2 From your LEX L10g device with a Verizon SIM card, dial the Verizon voicemail number *86.
- 3 Listen to the prompts and select Press X to turn ON/OFF Message Waiting Indication.
- 4 Turn **ON** Message Waiting Indication.

Voicemail is available to use.

4.7

Requesting an Emergency Alert from LEX L10g

This emergency alert procedure is used to indicate a critical situation and is similar to pressing the emergency alert button on the radio. The emergency alert signal overrides any other communication over the selected channel on the radio.

Prerequisites: The radio and the LEX L10g are successfully paired.

When and where to use: Use this procedure to use the LEX L10g to trigger an emergency alert on the radio.




NOTICE: When LEX L10g is paired to an LMR, an LMR emergency is sent out. When the LEX L10g is paired to an LMR radio and an emergency is activated, it is equivalent to pressing the LMR emergency button. If you are not paired with an LMR radio or the LMR emergency fails (that is, out of range), the LEX L10g can be programmed to call a pre-provisioned number instead. In either case, a text message can be sent to pre-provisioned numbers with basic information.

Procedure:

- 1 Swipe up from the icon.
- 2 Tap Activate Emergency.

A popup displays giving you 2 seconds to cancel the emergency alert.


Figure 45: Emergency Alert Activation Popup

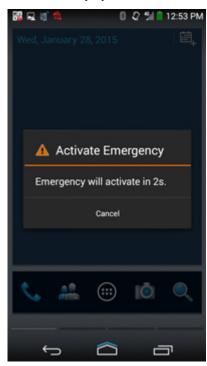

3 Swipe down from the top of the LEX L10g to view notifications.

An **Emergency** notification should be included in the list of notifications.

Figure 46: Notification Screen with Emergency Notification

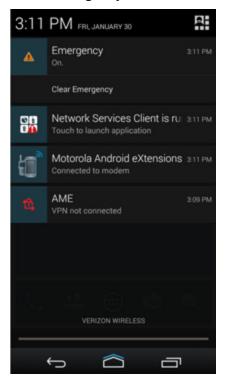

4 Tap Clear Emergency.

Chapter 5

Radio Services

Radio Services for LEX L10g

The Radio Services application enables a LEX L10g user to control a P25 Land Mobile Radio (LMR) directly from the LEX L10g. In this way, the P25 radio can operate when carried inside a pouch and radio voice communication is routed directly between the radio and a headset.



NOTICE: The Radio Services application is a free application available on the LEX L10g. If you are pairing with APX models of the P25 Land Mobile Radio, an additional Mission Critical Wireless option (an optional Bluetooth board inside the APX radio) must be purchase for the APX radio.

Before starting to use the P25 radio with the LEX L10g, Bluetooth pairing is required. After paired with the radio, the LEX L10g initiates a secure connection with the radio.



NOTICE: After pairing the LEX L10g with the P25 Land Mobile Radio (LMR), maintain a distance of no more than 30 feet (10 meters) between the LEX L10g and the radio. Controlling the radio and initiating an emergency alert from the LEX L10g beyond 30 feet (10 meters) may fail.

The Radio Services application is used for:

- Push-to-Talk communication
- Switching radio zones
- Changing channels
- · Setting and selecting favorite channels
- Changing radio volume
- · Sending an emergency alert
- Monitoring the radio battery and signal power

5.1

Pairing Radio with the LEX L10g

Prerequisites:

- Verify that your Land Mobile Radio (LMR) includes a secure Bluetooth pairing feature. Turn on Bluetooth feature of the LEX L10g and radio. In the radio, enable the Bluetooth tones (see LMR User Guide).
- The LEX L10g is not paired with other radio.

When and where to use: Use this procedure to pair a LEX L10g with a radio.



NOTICE: To pair the LEX L10g to a radio, ensure that the Bluetooth feature of the LEX L10g is enabled and bring the blue pairing points on each device to within 2.5 cm. Once paired, their Bluetooth link has a line-of-sight range of 30 feet (10 meters).

Procedure:

1 From the **Home** screen, tap

The **Application** screen displays.

2 Tap .

The Pair with a Radio screen appears.



NOTICE: Alternatively, you can access the **Pair with a Radio** screen through the **Home** screen **Overlay**.

Figure 47: Pair With a Radio Screen



3 Place the radio close to the LEX L10g, aligning the blue pairing point on the LEX L10g with the blue pairing point on the radio.



NOTICE: The blue pairing points must be within 2.5 cm of each other for pairing to happen.

Figure 48: Blue Pairing Dots



• If the pairing process is successful, the radio sounds an incremental-pitched tone to indicate paired.

MN002858A01-A Chapter 5: Radio Services

• If the pairing process fails, the radio sounds a short, low pitched tone. On the LEX L10g screen, tap **Pair** to try again to resume pairing.

Once a successful pairing is established, the **Bluetooth Connection** screen is displayed for a few seconds, followed by the **Radio Services** screen.

Figure 49: Bluetooth Connection Screen


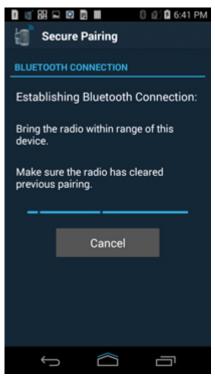


Figure 50: Radio Services Screen

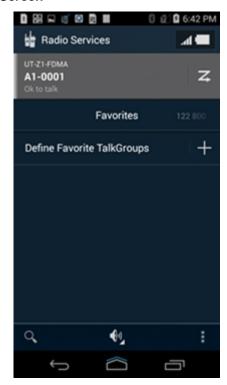

After pairing, the range of Bluetooth operation is 30 feet (10 meters) line-of-sight communication. That means an unobstructed path between the LEX L10g and the radio. Line-of-sight obstructions include trees, buildings, mountains, cars, and so on.

Do not leave the radio behind and expect the LEX L10g to work with a high degree of reliability when they are separated. At the fringe areas of reception, link can be broken. To correct this problem, position the LEX L10g and radio closer to each other to reestablish connection.

The LEX L10g remembers the radio and will automatically resume connection whenever the radio is on and within connection range.

5.2

Unpairing Radio from LEX L10g

Prerequisites: The LEX L10g is paired with the radio.

When and where to use: Use this procedure to unpair the LEX L10g from a radio.

Procedure:

1 From the **Home** screen, tap

2 Tap 1

The Radio Services screen appears.

Figure 51: Radio Services Screen

3 Tap → Unpair.

The Unpair Radio Screen appears.

Figure 52: Unpair Radio Screen



4 Tap **OK**.

The Bluetooth screen appears.


Figure 53: Pairing Radio Screen





The Paired Bluetooth Device screen appears.

Figure 54: Paired Bluetooth Device

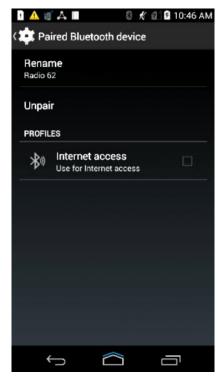

6 Tap Unpair.

The **Bluetooth** screen appears and the device is unpaired.


Figure 55: Unpair Complete



7 Tap and select Unpair.

A menu displays.

Figure 56: Select Unpair

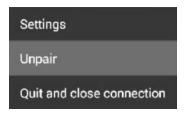

8 Tap Yes.

The LEX L10g emits a sound indication and the **Unpaired** screen is displayed. The LEX L10g and radio are no longer paired.

Figure 57: Unpaired Screen



5.3

Setting Zone and Channel

Prerequisites: The radio and the LEX L10g are successfully paired.


When and where to use: Use this procedure to remotely set the zones of the remote radio on the LEX L10g.

Procedure:

- 2 Tap 1.

The Radio Services dialog box displays.


Figure 58: Radio Services Screen

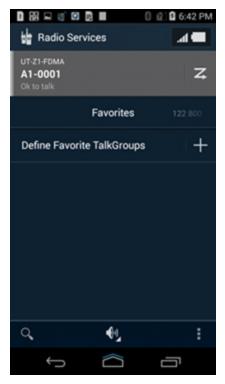

3 Select a zone.

The **Channel Selection** screen appears, displaying a list of channels available for that zone.

Figure 59: Channel Selection Screen

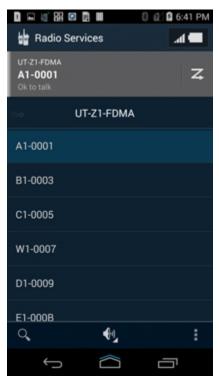

4 Select a channel.

The Radio Services screen is displayed.

5.4

Setting Radio Volume

Prerequisites: The radio and the LEX L10g are successfully paired.


When and where to use: Use this procedure to remotely set the volume for the remote radio on the LEX L10g.

Procedure:

- 2 Tap 1.

The Radio Services screen appears.


Figure 60: Radio Services Screen

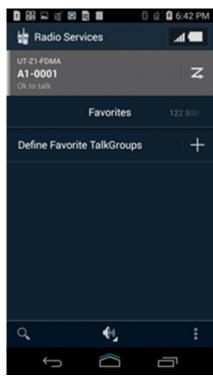

3 Tap 📆.

The radio volume slider displays.

Figure 61: Radio Volume Slider

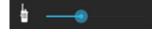

4 Tap anywhere on the **Radio Volume** slider to jump to a volume or drag to change the volume between 0 to 15.

5.5

Favorite Channels

The **Favorites** screen is used to have a quick glance at all saved zones and channels. Select one to connect.



NOTICE: Favorite Channels also appear in the Home screen overlay for quick access.

5.5.1

Viewing Favorite Channels

Prerequisites: The radio and the LEX L10g are successfully paired.


When and where to use: Use this procedure to view the Radio Services favorite zones and channels on the device.

Procedure:

- 1 From the **Home** screen, tap
- 2 Tap 1.

The Radio Services screen appears.

Figure 62: Radio Services Screen

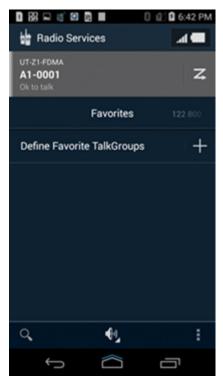


3 Tap Favorites.

The **Favorites** screen appears to view favorite zones and channels.

MN002858A01-A Chapter 5: Radio Services

Figure 63: Radio Services Favorites Screen

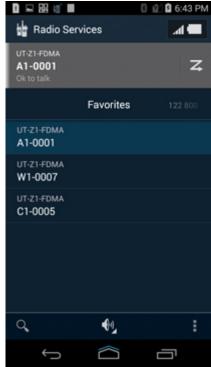

5.5.2

Adding a Favorite Zone and Channel

Prerequisites: The radio and the LEX L10g are successfully paired.


When and where to use: Use this procedure to add a Radio Services favorite zone and channel on the device.

Procedure:

2 Tap 1.

The Radio Services screen displays.


Figure 64: Radio Services Screen

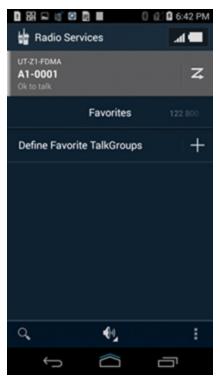

3 Tap + or Define Favorite TalkGroups.

The Add TalkGroups screen displays.

Figure 65: Add TalkGroups Screen

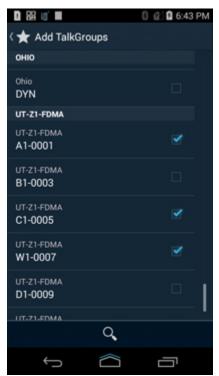

- 4 Select the TalkGroup (zone and channel) that you want to add to your favorites.
- 5 Tap < (top left side of screen) to return to the Radio Services screen.

5.5.3

Removing a Favorite Channel

Prerequisites: The radio and the LEX L10g are successfully paired.

When and where to use: Use this procedure to remove a Radio Services favorite zone or channel on the device.

Procedure:

- 1 From the **Home** screen, tap
- 2 Tap .


The Radio Services screen appears.

Figure 66: Radio Services Screen




3 Tap . The **Favorites** menu displays.

Figure 67: Favorites Menu

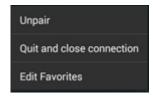

4 Select Edit Favorites.

Figure 68: Edit Favorites Screen

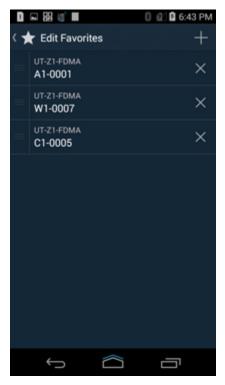

- 5 Tap the X next to the favorite channel to delete it.
- 6 Tap < (top left side of screen) to return to the Radio Services screen.

Chapter 6

Messaging

Use Messaging to send and receive SMS and MMS messages.

From **Home** or **All Apps** screen, tap ...

6.1


Sending a Text Message

When and where to use: Use this procedure to send text messages.

Procedure:

In the main Messaging screen, tap .
 The New Message screen displays.

Figure 69: New Message Screen

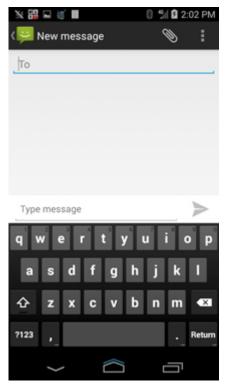

- 2 In the **To** field, enter a name or a mobile phone number.
- 3 In the **Type** message field, enter the text message.

Messages are limited to 160 characters. When the limit is approached, a counter displays, above the **Send** control, showing how many characters are left. If the limit is reached and the user keeps typing, a new message is created, which is joined with its predecessors when received.

MN002858A01-A Chapter 6: Messaging

If the user presses the **Back** button while composing a message, it is saved as a draft in the **Messaging** screen. Tap the conversation to resume composing it.

4 Tap to send the message.

6.2

Sending a Multimedia Message

When and where to use: Use this procedure to send multimedia messages.




NOTICE: Multimedia messaging is only supported when the device is in Public network mode.

Procedure:

1 In the main **Messaging** screen, tap **.**

The New Multimedia Message screen displays.

Figure 70: New Multimedia Message Screen

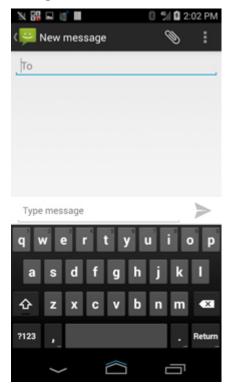


- 2 In the **To** field, enter a name or a mobile phone number.
- 3 Tap to attach the media file of your choice:
 - Pictures Select a picture to attach.
 - Capture picture Camera opens to take a picture and attach it.
 - Videos Select a video to attach.
 - Capture video Camcorder opens to record a video and attach it to the message.
 - Audio Choose a sound file to attach.
 - Record audio Sound Recorder opens to record a spoken message and attach it to the message.

MN002858A01-A Chapter 6: Messaging

• **Slideshow** — Opens a screen to assemble text, photos, videos, and recordings into a slideshow of up to 10 slides to attach to the message.

 4 Tap to send the message.



Chapter 7

Applications

This chapter describes the applications installed on the LEX L10g.

Normally, you access the applications through the **Home** screen overlay by clicking the icon. Swipe the **Home** screen up from the icon to reveal the icon.

7.1

Using File Browser

Use the File Browser application to view and manage files on the device.

Figure 71: File Browser Screen



The address bar indicates the current folder path. Tap the current folder path to manually enter a path and folder name.

Tap to select multiple files/folder.

Tap to view the internal storage root folder.

Tap to view the microSD card root folder.

Tap to view the previous folder or to exit the application.

Tap and hold an item to perform an operation on that item. Select one of the options from the **File Operations** menu:

- Information View detailed information about the file or folder.
- Move Move the file or folder to a new location.
- Copy Copy the select file.
- **Delete** Delete the selected file.
- Rename Rename the select file.

- Open as Open the selected file as a specific file type.
- Share Share the file with other devices.

Tap to open additional functionality:

- Tap the key → New Folder to create a new folder in the current folder.
- Tap the key → Search to search for a file or folder.
- Tap the key → Sort to sort the list by name, by type, by size or by date.
- Tap the key → Refresh to re-display the contents of the current folder.
- Tap the key → List View to change the folder view from tile to list format
- Tap the key → Change Size to change the size of the icons: Large, Normal or Small.
- Tap the key → **About File Browser** to view the application version information.

7.2

Managing People Contacts

Use the **People** application to manage contacts.

7.2.1

Adding People

When and where to use: Use this procedure to add contacts.

Procedure:

- 1 In the **People** application, tap
- 2 If there are more than one account with contacts, tap the one to use.
- **3** Type the contact's name and other information. Tap a field to start typing, and swipe down to view all categories.
- 4 Adding more than one entry for a category requires an additional step. For example:
 - To add a work address after typing a personal address, tap **Add new** for that field.
 - To open a menu with preset labels, such as **Home** or **Work** for an email address, tap the label to the right of the item of contact information.
 - To create your own label, tap **Custom** in the menu.
- 5 Tap Done.

7.2.2

Editing People

When and where to use: Use this procedure to edit contact information.

Procedure:

1 In the **People** application, tap 1 tab.

- 2 Tap a name to edit.
- 3 Tap ...
- 4 Tap Edit.
- 5 Edit the contact information.
- 6 Tap Done.

7.2.3

Deleting People

When and where to use: Use this procedure to delete contacts.

Procedure:

- 1 In the **People** application, tap 1 tab.
- 2 Tap a name to delete.
- 3 Tap ...
- 4 Tap Delete.
- 5 Tap **OK** to confirm.

7.3

Camera

This section provides information for taking photos and recording videos using the integrated digital cameras.



NOTICE: If a microSD card is installed, the device saves photos and videos on the microSD card. If a microSD card is not installed, the LEX L10g saves photos and videos on the internal storage.

Figure 72: Camera Photo Screen



Table 8: Camera Icons and Actions

Call Out	Icon	Action
1	Camera Options	Tap to select Camera, Video, or Panorama mode.
2	Shutter	Tap to take a photo, a panoramic photo, or to record a video.
3	Photo Settings	Tap to select camera settings.

7.3.1

Taking Photos

When and where to use: Use this procedure to take photos.



NOTICE: For camera settings, see Camera Settings on page 116.

Procedure:

Figure 73: Camera Screen



2 If necessary, tap to open the Camera Option bar and select Camera icon.

Figure 74: Camera Option Bar



- 3 Tap for settings.
- 4 Frame the subject on screen.
- **5** To zoom in or out, press two fingers on the display and pinch or expand fingers. The zoom controls appear on the screen.

Figure 75: Camera Zoom



6 Tap 🔼.

The camera brings the image into focus. When the image is in focus, the focus indicators (top and bottom of screen) turn green and the camera takes a photo.

7.3.2

Taking a Panoramic Photo

When and where to use: Use this procedure to create a single wide image by panning slowly across a scene.

Procedure:

- 1 From the **Home** screen, tap 10.
- 2 Tap the Camera Options bar and tap

Figure 76: Panoramic Mode



3 Frame one side of the scene to capture.

Figure 77: Panoramic Frame



- 4 Tap and slowly start panning across the area to capture. A small white square appears inside the button the shot is in progress.
 - If panning too quickly, the message **Too fast** displays.
- 5 Tap to end the shot. The panorama is displayed and a progress indicator displays while it saves the image.

7.3.3

Recording Videos

When and where to use: Use this procedure to record videos.

Procedure:

- 1 From the **Home** screen, tap 10.



3 To zoom in or out, press two fingers on the display and pinch or expand fingers.



NOTICE: Video zoom works the same as camera zoom.

- 4 Point the camera and frame the scene.
- 5 Tap to start recording.

The device starts recording the video. The video time remaining appears in the top left of the screen.

6 Tap o to end recording.


7.3.4

Camera Settings

When you are in **Photo** mode, photo settings are displayed on the screen.

Tap to display the photo settings options.

Figure 79: Camera Settings

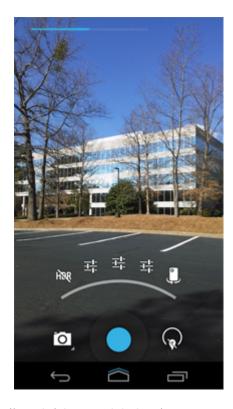

The available photo settings are (from left icon to right icon):


- Turn High Dynamic Range (HDR) on or off.
- Three screens of More Options. Settings for each option depend on the selected option. Click
 these icons to display more options. Some options require selecting a setting from a menu. Set
 these options accordingly.



NOTICE: These options are similar to the camera options seen on most cameras. Set accordingly.


- First More Options Screen.

Figure 80: First More Options Screen

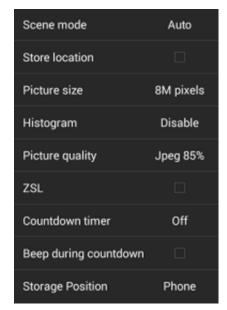


- Second More Options Screen.

Figure 81: Second More Options Screen

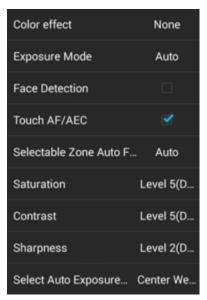

- Third More Options Screen.

Figure 82: Third More Options Screen

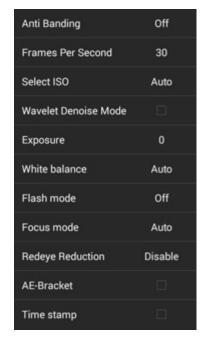


· Switch from front to rear camera or from rear to front camera.

7.3.5

Video Settings

When in **Video** mode, video settings are displayed on screen. Tap \bigcirc to display the video settings options.

Figure 83: Video Settings

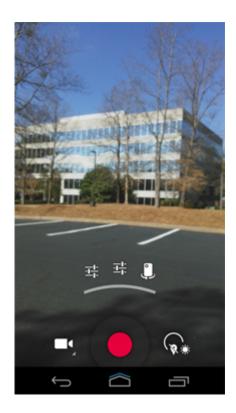

The available video settings are (from left icon to right icon):


• Two screens of **More Options**. Settings for each option depend on the selected option. You can select an item from a menu or you select an option by clicking it.



NOTICE: These options are similar to the video options seen on most cameras. Set the video options accordingly.


- First More Options Screen.

Figure 84: First More Options Video Screen

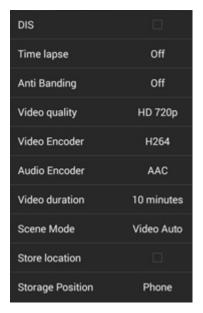

- Second More Options Screen.

Figure 85: Second More Options Video Screen

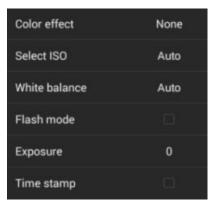

• Switch from front to rear video or from rear to front video.

7.4

Gallery

The **Gallery** is used to manage your photos and videos.



NOTICE: The device supports the following image formats: JPEG, GIF, PNG, and BMP.

Use the **Gallery** to:

· View photos

- Play videos
- · Perform basic editing of photos
- · Set photos as wallpaper
- Set photos as a contact photo
- Share photos and videos

To open the **Gallery** application, tap $\begin{center} \begin{center} \begin{cen$

The Gallery presents all photos and videos stored on the microSD card and internal memory.

Figure 86: Gallery — Albums



- Tap an album to open it and view its contents. The photos and videos in the album are displayed in chronological order.
- Tap a photo or video in an album to view it.
- Tap icon (top left corner) to return to the main Gallery screen.
- Tap to return to the main Gallery screen.

7.4.1

Working with Albums

Albums are groups of images and videos in folders.

Tap an album to open it. The photos and videos are listed in a chronologically ordered grid. The name of the album displays at the top of the screen.

Figure 87: Photos/Videos Inside an Album



Swipe left or right to scroll images across the screen.

7.4.1.1

Sharing an Album

When and where to use: Use this procedure to share an album in your Gallery.

Procedure:

- 1 Tap ...
- 2 Tap 2.
- 3 Tap and hold an album until it highlights.
- 4 Tap other albums as required.
- **5** Tap **< .**

Share applications are displayed.

- 6 Select the application that you want to use.
- **7** Follow the instructions within the selected application.

7.4.1.2

Getting Album Information

When and where to use: Use this procedure to view information about an album.

Procedure:

1 Tap [⊞].

- 2 Tap 🌌
- 3 Tap and hold an album until it highlights.
- 4 Tap ...
- 5 Tap Details.

7.4.1.3

Deleting an Album

When and where to use: Use this procedure to delete an album that you no longer need.

Procedure:

- 1 Tap [⊞].
- 2 Tap 💆
- 3 Tap and hold an album until it highlights.
- 4 Tap ...
- 5 Tap Delete.
- 6 Tap **OK** to delete the album.

7.4.2

Working with Photos

Use **Gallery** to view photos on the microSD card and edit and share photos.

7.4.2.1

Viewing and Browsing Photos

When and where to use: Use this procedure to view or browse photos that you have taken.

Procedure:

- 1 Tap .
- 2 Tap 📶
- 3 Tap an album to open it.
- 4 Tap a photo.

Figure 88: Photo Example



- 5 Swipe left or right to view the next or previous photo in the album.
- **6** Turn the LEX L10g to view the photo in upright (portrait) or sideways (landscape) orientation. The photo is displayed (but not saved) in the new orientation.
- **7** Tap the photo to view the controls.
- 8 Double-tap the screen to zoom in or pinch two fingers together or spread them apart to zoom in or out.
- **9** Drag the photo to view parts that are not in view.

7.4.2.2

Rotating a Photo

When and where to use: Use this procedure to rotate a photo.

Procedure:

- 1 Tap a photo to view the controls.
- 2 Tap
- 3 Tap 4.
- 4 Tap C.

The photo rotates 90° clockwise. Each tap rotates the photo another 90°. The photo is automatically saved with the new orientation.

7.4.2.3

Cropping a Photo

When and where to use: Use this procedure to crop a photo.

Procedure:

- 1 In the **Gallery**, tap a photo to view the controls.
- 2 Tap
- 3 Tap 4.
- 4 Tap 4).

The cropping grid displays.

Figure 89: Cropping Grid



- **5** Adjust the endpoints to select the portion of the photo to crop.
- 6 Tap CROP to save a copy of the cropped photo. The original version is retained.

7.4.2.4

Setting a Photo as a Contact Icon

When and where to use: Use this procedure to set a photo as a contact icon.

Procedure:

- 1 Tap
- 2 Tap 🌌

- 3 Tap an album to open it.
- 4 Tap the photo to open it.
- **5** Tap ...
- 6 Tap Set picture as.
- 7 Select a contact.
- 8 Crop the photo accordingly as described in Cropping a Photo on page 124.
- 9 Tap SAVE.

7.4.2.5

Sharing a Photo

When and where to use: Use this procedure to share a photo.

Procedure:

- 1 Tap [⊕].
- 2 Tap 💆
- 3 Tap an album to open it.
- 4 Tap a photo to open it.
- **5** Tap **≤**.
- 6 Tap the application to use for sharing the selected photo (for example Bluetooth).

7.4.2.6

Deleting a Photo

When and where to use: Use this procedure to delete a photo.

Procedure:

- 1 Tap .
- 2 Tap 💆
- 3 Tap an album to open it.
- 4 Tap a photo to open it.
- **5** Tap ...
- 6 Tap Delete.
- 7 Tap **OK** to delete the photo.

7.4.3

Working with Videos

Use the Gallery to view videos on the microSD card and share videos.

7.4.3.1

Watching a Video

When and where to use: Use this procedure to watch a video.

Procedure:

- 1 Tap [⊕].
- 2 Tap 2
- 3 Tap an album to open it.
- 4 Tap a video.
- 5 Tap

The video begins to play.

6 Tap the screen to view the playback controls.

Figure 90: Video Playback Controls





- 7 Tap the Pause control.
- 8 Tap to return to the previous screen or to return to the **Home** screen.

7.4.3.2

Sharing a Video

When and where to use: Use this procedure to share a video.

Procedure:

- 1 Tap ...
- 2 Tap _____
- 3 Tap an album to open it.
- 4 Tap a video to open it.
- **5** Tap **≤**.

The **Share** menu appears.

MN002858A01-A Chapter 7: Applications

6 Tap the application to use to share the selected video.
The selected application opens with the video attached to a new message.

 
7.4.3.3

Deleting a Video

When and where to use: Use this procedure to delete a video.

Procedure:

- 1 Tap
- 2 Tap 🔽
- 3 Tap an album to open it.
- 4 Tap a video to open it.
- **5** Tap ...
- 6 Tap Delete.
- **7** Tap **OK**.



Chapter 8

Wireless

This section provides information on the wireless features of the LEX L10g.

- Wireless Wide Area Network (WWAN)
- Wireless Local Area Network (WLAN)
- Bluetooth

8 1

Wireless Wide Area Networks

Use Wireless Wide Area Networks (WWANs) to access data over a cellular network.

This section provides information on:

- · Setting the preferred network Public / Private
- Sharing a data connection
- · Enabling / Disabling data roaming
- · Monitoring data usage
- · Limiting connections to 2G, 3G, 4G networks
- · Editing Access Point Names (APNs)
- Adding Virtual Private Network VPN
- Cellular broadcasts

8.1.1

Sharing the Mobile Data Connection

The **Tethering & portable hotspot** settings allow you to share your data connection. You can share the LEX L10g mobile data connection with a single computer via USB tethering or Bluetooth tethering. You can also share the data connection with up to eight devices at once, by turning it into a portable Wi-Fi hotspot. While the device is sharing its data connection, an icon appears at the top of the screen and a corresponding message appears in the notification list.

8.1.1.1

Configuring USB Tethering

Use this procedure to share a data connection with a host computer.



NOTICE: USB tethering is not supported on computers running Mac OS. If your computer is running Windows 7 or a recent version of Linux (such as Ubuntu), follow these instructions without any special preparation. If running a version of Windows that precedes Windows 7, or some other operating system, you may need to prepare the computer to establish a network connection via USB.



NOTICE: After connecting to a computer using USB tethering, the computer disconnects from the network connection, for a short time, and does not have access to the Internet (the LEX L10g becomes the primary network adapter).

Procedure:

1 Connect the LEX L10g to a host computer with the USB cable.

Figure 91: USB Cable Connection to Host Computer



A USB icon appears at the top of the screen, and the notification **Connected as a media device** appears briefly at the top of the screen.

- 2 Tap ...
- 3 Tap 🔯
- 4 Tap More
- 5 Tap Tethering & portable hotspot.
- 6 Check USB tethering.

The host computer is now sharing the LEX L10g data connection.

Postrequisites: To stop sharing the data connection, uncheck USB tethering or disconnect the USB cable.



NOTICE: The USB cover needs to be fully seated after use.

8.1.1.2

Configuring Bluetooth Tethering

Prerequisites: Configure the host computer to obtain its network connection using Bluetooth. For more information, see the host computer's documentation.

When and where to use: Use this procedure to tether Bluetooth to share the data connection with a host computer.

Procedure:

1 Pair the LEX L10g with the host computer.

- 2 Tap [⊕].
- 3 Tap 🍑
- 4 Tap More
- 5 Tap Tethering & portable hotspot.
- 6 Check Bluetooth tethering.

The host computer is now sharing the LEX L10g data connection.

Postrequisites: To stop sharing the data connection, uncheck Bluetooth tethering.

8.1.1.3

Configuring Portable Wi-Fi Hotspot Settings

Prerequisites: Configure the Wi-Fi Hotspot settings.

When and where to use: Use this procedure to turn your LEX L10g into a portable Wi-Fi hotspot.

Procedure:

- 1 Tap
- 2 Tap 🔯
- 3 Tap More
- 4 Tap Tethering & portable hotspot.
- 5 Select Portable Wi-Fi hotspot.

After a moment, the LEX L10g starts broadcasting its Wi-Fi network name (SSID), so you can connect to it with up to eight computers or other devices.

Postrequisites: To stop sharing the data connection, uncheck Portable Wi-Fi hotspot.

8.1.1.3.1

Configuring the Wi-Fi Hotspot

When and where to use: Use this procedure is used to configure a Wi-Fi hotspot.

Procedure:

- 1 Tap
- 2 Tap <equation-block>
- 3 Tap More
- 4 Tap Tethering & portable hotspot.
- 5 Tap Set up Wi-Fi hotspot.

The **Set up Wi-Fi hotspot** screen displays.

Figure 92: Set up Wi-Fi Hotspot Dialog Box



- 6 In the **Network SSID** text field, edit the network name.
- 7 Tap the **Security** option and select a security method from the drop-down list.
 - Open
 - WPA2 PSK.
- 8 In the **Password** text field, enter a password.

NOTICE: If Open is selected in the Security option, a password is not required.

9 Tap Save.

8.1.2

Data Usage

Data usage refers to the amount of data uploaded or downloaded by the LEX L10g during a given period. Depending on the wireless plan, you may be charged additional fees when your data usage

exceeds your plan's limit. To monitor your data usage, go to → Data usage.



CAUTION: The usage displayed on the data usage settings screen is measured by your device. Your carrier's data usage accounting may differ. Usage in excess of your carrier plan's data limits can result in steep overage charges. The feature described here can help you track your usage, but is not guaranteed to prevent additional charges.

Data usage settings allow you to:

- Set the data usage level at which you' will receive a warning.
- · Set a data usage limit.
- View or restrict data usage by app.

Identify mobile hotspots and restrict background downloads that may result in extra charges.

By default, when you open the data usage settings screen you see the settings for mobile data: that is, the data network or networks provided by your carrier.

Just below the on-off switch, note the data usage cycle. Tap it to choose a different cycle. This date range is the period of time for which the graph displays data usage.

The vertical white lines on the graph show a period of time within the data usage cycle. This range determines the usage amount displayed just below the graph. Drag lines to change the period.

8.1.2.1

Setting Data Usage Warning

When and where to use: Use this procedure to set data usage warning.

Procedure:

- 2 Tap 😱
- 3 Tap Data usage.
- 4 Check Set mobile data limit.
- 5 Drag the red line up/down to the level where you want to limit.
- 6 Drag the orange line up/down to the level where you want to receive a warning. When your data usage reaches this level, you' will receive a notification.

8.1.2.2

Setting Auto-Sync

You can also conserve data usage by syncing your apps manually, only when you need the data, rather than relying on auto-sync.

When and where to use: Use this procedure to set Auto-Sync.

Procedure:

To turn auto-sync off or on, tap ■ → Auto-sync data.

8.1.3

Disabling Data When Roaming

When and where to use: Use this procedure to prevent the LEX L10g from transmitting data over other carriers' mobile networks when leaving an area that is covered by the carrier's networks. This is useful for controlling expenses if the service plan does not include data roaming.

Procedure:

- 2 Tap
- 3 Tap More....
- 4 Tap Mobile networks.
- 5 Un-check Data roaming.

8.1.4

Limiting Data Connection to a Network

You can limit the device Private or Public services or extend the battery life by limiting the data connections to Global networks, LTE networks, or CDMA networks.



NOTICE: This feature is only available on some networks. Check with service provider.

When and where to use: Use this procedure to limit data connection to a network.

Procedure:

- 1 Tap [⊞].
- 2 Tap 🔯
- 3 Tap More
- 4 Tap Mobile networks.
- 5 Tap Network Mode.
- 6 Select Global mode, LTE only, or CDMA only.

8.1.5

Editing the Access Point Name

When and where to use: When network information needs to change, the user can edit the APN information.



NOTICE: Many service provider Access Point Name (APN) data are pre-configured in the LEX L10g.

Procedure:

- 1 Tap .
- 2 Tap <equation-block>
- 3 Tap More
- 4 Tap Mobile networks.
- 5 Tap Access Point Names.
- 6 Tap ...
- 7 When finished, tap ...
- 8 Tap Save.
- 9 Tap the radio button next to the new APN name to start using it.
- **10** Tap ______.

8.1.6

Adding a Virtual Private Network (VPN)

A virtual private network (VPN) extends a private network across a public network. VPN enables the LEX L10g to communicate data across a public network while benefiting from the functionality and security of the private network. When connected by VPN, the LEX L10g establishes a virtual point-to-point connection through a dedicated virtual tunneling protocols or data encryption. The LEX L10g enables connection to Basic VPN to communicate through any VPN and to Motorola Solutions Mobile VPN (MVPN) to communicate through Motorola Solutions mobile VPN. This section describes adding a basic VPN. Motorola Mobile VPN is added and configured by your technical support and requires license certification for use.

When and where to use: Use this procedure to add a virtual private network to the LEX L10g (not including the Motorola Mobile VPN).

Procedure:

- Tap [™].
- 2 Tap <equation-block>
- 3 Tap More....
- 4 Tap VPN.
- 5 Tap Basic VPN.
- 6 Tap + to add VPN profile.
- 7 Enter and check:
 - Name
 - Type
 - Server Address
 - If required, check PPP encryption (MPPE).
 - If required, check Show advanced options to enter:
 - DNS servers
 - · DNS search domains
 - Forwarding routs
- 8 Tap Save.

Connection to VPN is indicated by on the status bar and the **Choose Certification** screen is displayed.

9 Check My Keychain and tap Allow.

10 Tap 🔼

8.1.7

Cell Broadcasts

Cell Broadcasts allows emergency alert messages to be broadcast simultaneously from a service provider to multiple users in within a designated geographical area. Broadcasts are often used for weather updates, regional events, traffic conditions and other services.

When and where to use: Use this procedure to enable emergency alert messages by cell broadcasts on the LEX L10g.

Procedure:

- 1 Tap ...
- 2 Tap 🔯
- 3 Tap More....
- 4 Tap Cell broadcasts.
- 5 Check the emergency alert types you want to receive.
- 6 Tap 🗀.

8.2

Wireless Local Area Networks

Wireless local area networks (WLANs) allow the LEX L10g to communicate wirelessly inside a building.

Before using the LEX L10g on a WLAN, the facility must be set up with the required hardware to run the WLAN (sometimes known as infrastructure). The infrastructure and the LEX L10g must both be properly configured to enable this communication.

See the documentation provided with the infrastructure (access points (APs), access ports, switches, Radius servers) for instructions on how to set up the infrastructure.

Once the infrastructure is set up to enforce the chosen WLAN security scheme, use the **Wireless & networks settings** to configure the LEX L10g to match the security scheme.

The device supports the following WLAN security options:

- Open
- Wireless Equivalent Privacy (WEP)
- Wi-Fi Protected Access (WPA)/WPA2 Personal (PSK)
- Extensible Authentication Protocol (EAP)
 - Protected Extensible Authentication Protocol (PEAP) with Microsoft Challenge-Handshake Authentication Protocol version 2 (MSCHAPv2) and Generic Token Card (GTC) authentication.
 - EAP-Transport Layer Security (TLS)
 - EAP-TTLS with Password Authentication Protocol (PAP), MSCHAP and MSCHAPv2 authentication

The **Status** bar displays icons that indicate Wi-Fi network availability and Wi-Fi status.



NOTICE: Turn off Wi-Fi when not using it, to extend the life of the battery.

8.2.1

Scanning and Connecting to a Wi-Fi Network


When and where to use: Use this procedure to scan for and connect to a Wi-Fi network.

Procedure:

Tap [™].




Figure 93: Settings Screen

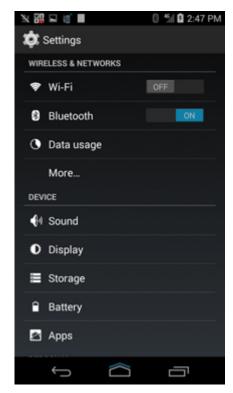

- 3 Slide the Wi-Fi switch to the ON position.
- 4 Tap Wi-Fi. The device searches for WLANs in the area and lists them.

Figure 94: Wi-Fi Screen

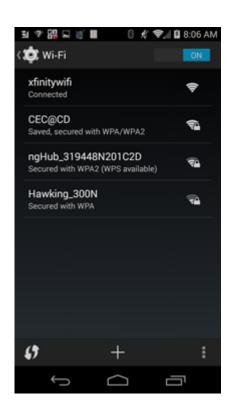

- 5 Scroll through the list and select the desired WLAN network.
- **6** For open networks, tap profile once or press and hold and then select **Connect to network** or for secure networks enter the required password or other credentials then tap **Connect**. See technical support for more information.
 - The LEX L10g obtains a network address and other required information from the network using the dynamic host configuration protocol (DHCP) protocol.
- 7 In the Wi-Fi setting field, Connected displays indicating that the device is connected to the WLAN.

8.2.2

Configuring a Wi-Fi Network

When and where to use: Use this procedure to configure a Wi-Fi network.

Procedure:


- Tap [™].
- 2 Tap 🌄
- 3 Tap Wi-Fi.
- 4 Slide the switch to the **ON** position.

The LEX L10g searches for WLANs in the area and lists them on the screen.

- 5 Scroll through the list and select the desired WLAN network.
- 6 Tap the desired network.

If the network security is **Open**, the device automatically connects to the network. For all other network security a dialog box appears.

Figure 95: WLAN Network Security Dialog Boxes

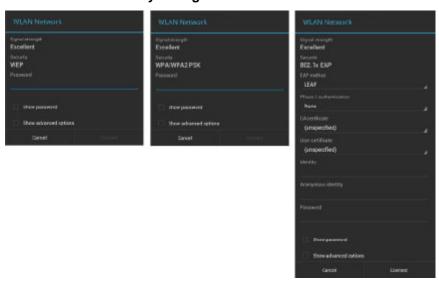

NOTICE: By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**.

- 7 If the network security is WEP or WPA/WPA2 PSK, enter the required password and then tap Connect.
- 8 If the network security is 802.1x EAP, enter the information below and then tap Connect:
 - Tap the EAP method drop-down list and select PEAP, TLS, or TTLS.
 - Tap the Phase 2 authentication drop-down list and select an authentication method.
 - If required, tap **CA certificate** and select a **Certification Authority (CA)** certificate. Note: Certificates are installed using the Security settings.
 - If required, tap **User certificate** and select a user certificate. Note: User certificates are installed using the **Location & security** settings.
 - If required, in the **Identity** text box, enter the username credentials.
 - If desired, in the **Anonymous identity** text box, enter an anonymous identity username.
 - If required, in the **Password** text box, enter the password.

8.2.3

Adding a Wi-Fi Network

When and where to use: You can add a Wi-Fi Network that is currently out of range or indiscoverable.

Procedure:

- 2 Tap .
- 3 Tap Wi-Fi.
- 4 Slide the Wi-Fi switch to the On position.
- 5 Tap +.
- 6 Enter network SSID and select Security.
- 7 Tap Save.

The device connects to the wireless network.

8 Tap 🗀.

8.2.4

Manually Adding a Wi-Fi Network

When and where to use: Use this procedure to manually add a Wi-Fi network if the network does not broadcast its name (SSID) or to add a Wi-Fi network when out of range.

Procedure:

- 1 Tap ...
- 2 Tap <equation-block>
- 3 Tap Wi-Fi.
- 4 Slide the Wi-Fi switch to the ON position.

5 Tap + in the bottom right corner of the screen.

By default, the network Proxy is set to **None** and the IP settings is set to **DHCP**.

- **6** In the **Network SSID** text box, enter the name of the Wi-Fi network.
- 7 In the Security drop-down list, select the type of security. Options included are:
 - None
 - WEP
 - WPA/WPA2 PSK
 - 802.1x EAP
- 8 If the network security is None, tap Save.
- 9 If the network security is WEP or WPA/WPA2 PSK, enter the required password and then tap Save.

10 If the network security is 802.1x EAP enter the information below and then tap Save:

- Tap EAP method drop-down list and select PEAP, TLS, or TTLS.
- Tap Phase 2 authentication drop-down list and select an authentication method.
- Tap CA certificate and select a Certification Authority (CA) certificate.



NOTICE: Certificates are installed using the **Security** settings.

Tap User certificate and select a user certificate.



NOTICE: User certificates are installed using the Security settings.

- Tap Identity to enter the username credentials.
- Tap Anonymous to enter an anonymous identity username.
- Tap Password to enter password.

11 Tap 🔼

8.2.5

Advanced Wi-Fi Settings

Use the **Advanced** settings to configure additional Wi-Fi settings.



NOTICE: Advanced Wi-Fi settings are for the device not for a specific wireless network.

From the **Wi-Fi** screen, tap

→ **Advanced** to view the advanced settings.

- Network notification When enabled, notifies the user when an open network is available.
- Keep Wi-Fi on during sleep Opens a menu to set whether and when the Wi-Fi radio turns off.
 - **Always** The radio stays on when the device enters suspend mode.
 - **Only when plugged in** The radio stays on while the device is connected to external power.
 - Never (increases data usage) The radio turns off when the device enters suspend mode (default).
- Wi-Fi optimization Minimize the battery usage when Wi-Fi is on.
- Avoid poor Connection Connects to the internet only if connection is good.
- MAC address Displays the Media Access Control (MAC) address of the device when connecting to Wi-Fi networks.

IP address — Displays the IP address of the device when connecting to Wi-Fi networks.

8.2.6

WLAN Configuration

Use the WLAN Configuration settings to configure additional WLAN settings.

From the **Wi-Fi** screen, tap

→ **Advanced** to view the settings. The following two settings are used to configure WLAN:

- · Wi-Fi frequency band
 - Auto (2.4GHz and 5GHz) —Use both the 2.4 GHz and 5 GHz bands (default).
 - **5GHz Only** Use only the 5 GHz band.
 - 2.4GHz Only —Use only the 2.4 GHz band.
- · Keep Wi-Fi on during sleep
 - Always Wi-Fi is always enabled even in sleep mold.
 - **Only when plugged in** Wi-Fi is enabled only when the device is plugged in. If the device is not plugged in, the device will not enter the sleep mold.
 - **Never (increases data usage)** Wi-Fi is never disabled.

8.2.7

Modifying a Wi-Fi Network

The user can change settings and passwords for a network in the Wi-Fi list.

When and where to use: Use this procedure to modify a Wi-Fi network.

Procedure:

- 1 Tap .
- 2 Tap .
- 3 Tap Wi-Fi.
- 4 Slide the Wi-Fi switch to the ON position.
- 5 Tap and hold on a network name and then tap **Modify network**.
- 6 Modify the network settings and then tap Save.
- **7** Tap ______.

8.2.8

Removing a Wi-Fi Network

When and where to use: Use this procedure to remove a Wi-Fi network from your list of Wi-Fi networks.

Procedure:

- 1 Tap ...
- 2 Tap <equation-block>
- 3 Tap Wi-Fi.

- 4 In the Wi-Fi networks list, tap and hold the name of the network.
- 5 In the menu, tap Forget network.
- 6 Tap _____

8.3

Bluetooth Device

Bluetooth-equipped devices can communicate without wires, using frequency-hopping spread spectrum (FHSS) radio frequency (RF) to transmit and receive data in the 2.4 GHz Industry Scientific and Medical (ISM) band (802.15.1).

Bluetooth wireless technology is specifically designed for short-range (10 meters (32.8 feet)) communication and low power consumption. Devices with Bluetooth capabilities can exchange information such as files, appointments, and tasks with other Bluetooth enabled devices such as printers, access points, and other mobile devices.

The LEX L10g supports a variety of Bluetooth accessories and supports remote radio control over following Land Mobile Radios:

- APX 6000
- APX 6000XE
- APX 7000
- APX 7000XE
- APX 7000L

8.3.1

Adaptive Frequency Hopping

Adaptive Frequency Hopping (AFH) is a method of avoiding fixed frequency interferers, and can be used with Bluetooth voice. All devices in the piconet (Bluetooth network) must be AFH-capable in order for AFH to work. There is no AFH when connecting and discovering devices. Avoid making Bluetooth connections and discoveries during critical 802.11b communications.

AFH for Bluetooth consists of four main sections:

- Channel Classification A method of detecting an interference on a channel-by-channel basis, or pre-defined channel mask.
- Link Management Coordinates and distributes the AFH information to the rest of the Bluetooth network.
- Hop Sequence Modification Avoids interference by selectively reducing the number of hopping channels.
- Channel Maintenance A method for periodically re-evaluating the channels.

The Bluetooth radio in this device operates as a Class 2 device power class. The maximum output power is 2.5 mW and the expected range is 10 meters (32.8 ft.). A definition of ranges based on power class is difficult to obtain due to power and device differences, and whether one measures open space or closed office space.



NOTICE: It is not recommended to perform Bluetooth wireless technology inquiry when high rate 802.11b operation is required.

8.3.2

Bluetooth Security

The current Bluetooth specification defines security at the link level. Application-level security is not specified. This allows application developers to define security mechanisms tailored to their specific need. Link-level security occurs between devices, not users, while application-level security can be implemented on a per-user basis. The Bluetooth specification defines security algorithms and procedures required to authenticate devices, and if needed, encrypt the data flowing on the link between the devices. Device authentication is a mandatory feature of Bluetooth while link encryption is optional.

Pairing of Bluetooth devices is accomplished by creating an initialization key used to authenticate the devices and create a link key for them. Entering a common personal identification number (PIN) in the devices being paired generates the initialization key. The PIN is never sent over the air. By default, the Bluetooth stack responds with no key when a key is requested (it is up to user to respond to the key request event). Authentication of Bluetooth devices is based-upon a challenge-response transaction. Bluetooth allows for a PIN or passkey used to create other 128-bit keys used for security and encryption. The encryption key is derived from the link key used to authenticate the pairing devices. Also worthy of note is the limited range and fast frequency hopping of the Bluetooth radios that makes long distance eavesdropping difficult.

Recommendations are:

- · Perform pairing in a secure environment
- Keep PIN codes private and do not store the PIN codes in the device
- Implement application-level security

8.3.3

Bluetooth Profiles

The LEX L10g supports the following Bluetooth services:

- Generic Access Profile (GAP) Use for device discovery and authentication.
- Service Discovery Protocol (SDAP) Handles the search for known and specific services and general services.
- Serial Port Profile (SPP) Sets up a virtual serial port and connects two Bluetooth enabled devices. For example, connecting the device to a printer.
- Human Interface Device Profile (HID) Allows Bluetooth keyboards, pointing devices, gaming devices and remote monitoring devices to connect to the device.
- Object Push Profile (OPP) Allows the device to push and pull objects to and from a push server.
- Dial-up Networking (DUN) Allows the device to access the Internet and other dial-up services
 using a Bluetooth enabled mobile phone.
- Hands-Free Profile (HFP) Allows a hands-free device, such as a Bluetooth headset, to place and receive calls on the device.
- Advanced Audio Distribution Profile (A2DP) Allows the device to stream stereo-quality audio to a wireless headset or wireless stereo speakers.
- Audio/Video Remote Control Profile (AVRCP) Allows the device to control televisions, hi-fi equipment, etc.
- General Object Exchange Profile (GOEP) Provides a basis for other data profiles. Based on OBEX and sometimes referred to as such.
- Handsfree Profile (HFP) Allow car hands-free kits to communicate with mobile phones in the car.

- Personal Area Network (PAN) Allow the use of Bluetooth Network Encapsulation Protocol on Layer 3 protocols for transport over a Bluetooth link.
- General Audio/Video Distribution Profile (GAVDP) Provides the basis for A2DP, and VDP.
- Phone Book Access Profile (PBAP) Allows exchange of Phone Book Objects between a car kit and a mobile phone to allow the car kit to display the name of the incoming caller; allow the car kit to download the phone book so the user can initiate a call from the car display.
- Message Access Profile (MAP) allows exchange of messages between devices.
- Headset Profile (HSP) Provides support for the popular Bluetooth headsets to be used with mobile phones with ability to ring, answer a call, hang up and adjust the volume.
- File Transfer Profile (FTP) Provides the capability to browse, manipulate and transfer files and folders in a file system of another system.
- Proximity profile (PXP) Enables proximity monitoring between two devices.
- Heart Rate Profile (HRP) Enables transmission and reception of medical device data.
- Health Thermometer profile (HTP) Enables transmission and reception of medical device data.

8.3.4

Bluetooth Power States

The Bluetooth radio is off by default.

The following modes are available:

- Suspend When the device goes into suspend mode, the Bluetooth radio stays on.
- Airplane Mode When the device is placed in Airplane Mode, the Bluetooth radio turns off.
 When Airplane Mode is disabled, the Bluetooth radio returns to the prior state. When in Airplane Mode, the Bluetooth radio can be turned back on if desired.

8.3.5

Bluetooth Radio Power for Android

Turn off the Bluetooth radio to save power or if entering an area with radio restrictions (e.g., an airplane). When the radio is off, other Bluetooth devices cannot see or connect to the device. Turn on the Bluetooth radio to exchange information with other Bluetooth devices (within range). Communicate only with Bluetooth radios in close proximity.



NOTICE: To achieve the best battery life, turn off radios when not in use.

8.3.5.1

Enabling Bluetooth

When and where to use: Use this procedure to enable Bluetooth.

Procedure:

- 1 Tap ...
- 2 Tap <equation-block>
- 3 Slide the Bluetooth switch to the ON position. B also appears in the Status bar.
- 4 Tap 🗀.

MN002858A01-A Chapter 8: Wireless

8.3.5.2

Disabling Bluetooth

Use this procedure to disable Bluetooth.

Procedure:

- 1 Tap [⊕].
- 2 Tap 🔯
- 3 Slide the Bluetooth switch to the OFF position.
- 4 Tap ______.

8.3.6

Discovering Bluetooth Devices

The LEX L10g can receive information from discovered devices without pairing. However, once paired, the device and a paired device exchange information automatically when the Bluetooth radio is on. To find Bluetooth devices in the area:

Prerequisites: Ensure that Bluetooth is enabled on both devices. Ensure that the Bluetooth device to discover is in discoverable mode. Ensure that the two devices are within 10 meters (32.8 feet) of one another.

When and where to use: Use this procedure to discover Bluetooth devices.

Procedure:


- 1 Tap ...
- 2 Tap 🔯
- 3 Tap Bluetooth.
- 4 Tap SEARCH FOR DEVICES.

The LEX L10g begins searching for discoverable Bluetooth devices in the area and displays them under **AVAILABLE DEVICES**.

5 Scroll through the list and tap a device.

The Bluetooth pairing request dialog box displays.

Figure 96: Bluetooth Pairing

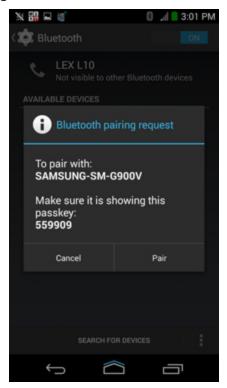

6 Tap Pair on both devices.

The Bluetooth device is added to the **Bluetooth devices** list and a trusted ("paired") connection is established.

8.3.7

Changing the Bluetooth Name

By default, the LEX L10g has a generic Bluetooth name that is visible to other devices when connected.

When and where to use: Use this procedure to change the Bluetooth name.

Procedure:

- 1 Tap [⊕].
- 2 Tap 🔯
- 3 Tap Bluetooth.
- 4 If Bluetooth is not on, slide the switch to the **ON** position.
- 5 Tap ...
- 6 Tap Rename Phone.
- 7 Enter a name and tap Rename.
- 8 Tap 🗀

MN002858A01-A Chapter 8: Wireless

8.3.8

Connecting to a Bluetooth Device

Prerequisites: The Bluetooth device must be in discoverable mode.

When and where to use: Use this procedure to connect to a Bluetooth device once paired.

Procedure:

- 1 Tap [⊕],
- 2 Tap 🔯
- 3 Tap Bluetooth.
- 4 If Bluetooth is not on, slide the switch to the **ON** position.
- 5 In the AVAILABLE DEVICES list, tap an unconnected Bluetooth device until a menu appears.
- 6 Tap Pair.

When connected, the device is displayed as connected in the list.

8.3.9

Selecting Profiles on a Bluetooth Device

Some Bluetooth devices have multiple profiles for different connections.

When and where to use: Use this procedure to select a profile on the Bluetooth device that connects to the LEX L10g.

Procedure:

- Tap ⊕.
- 2 Tap .
- 3 Tap Bluetooth.
- 4 In the AVAILABLE DEVICES list, tap an ext to the device name.
- 5 Under **PROFILES**, select a profile to use.

8.3.10

Unpairing a Bluetooth Device

Prerequisites: The Bluetooth device is paired with the LEX L10g.

When and where to use: Use this procedure to unpair a Bluetooth device and erase all its pairing information.

Procedure:

- 1 Tap [⊞].
- 2 Tap 🔯
- 3 Tap **Bluetooth**.

- 4 In the **AVAILABLE DEVICES** list, tap an ext to the device name.
- 5 Tap Unpair.
- 6 Press a.

8.4

Pairing the LEX L10g with a Radio

The LEX L10g can extend its functionality by remotely operating and controlling an external proprietary Motorola Solutions Radio (such as the APX[™]7000/APX[™]7000L) or accessory using Bluetooth.

Once pairing is established, the range of connection is no more than 10 meters (32.8 feet) line-of-sight. This is an unobstructed path between the location of the LEX L10g and the location of the Radio (or other paired accessory).

Obstacles that can cause an obstruction in the line-of-sight include trees, buildings, cars and etc. It is NOT recommended that you leave the Radio behind and expect the LEX L10g to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound "garbled" or "broken". To correct this problem, simply position the LEX L10g and Radio (or other paired accessory) closer to each other (within the 10 meter defined range) to re-establish clear audio reception.

8.4.1

Establishing a Connection

Prerequisites:

- Verify that your Land Mobile Radio (LMR) includes a secure Bluetooth pairing feature. Turn on Bluetooth feature of the LEX L10g and radio. In the radio, enable the Bluetooth tones (see LMR User Guide).
- The LEX L10g is not paired with another radio.

When and where to use: Use this procedure to pair the LEX L10g with a radio.

Procedure:

- 1 Turn on the radio.
- 2 On the LEX L10g screen, tap ...
- 3 On the LEX L10g screen, tap

The **Pairing** screen displays on the LEX L10g and the pairing process starts.

Figure 97: Pairing Screen




4 Bring the blue pairing dots on the LEX L10g and radio close to each other (within 2.5 cm) and follow the instructions shown on the LEX L10g screen.

Figure 98: Blue Pairing Dots



- If the pairing process is successful, the radio sounds an incremental-pitched tone to indicate paired.
- If the pairing process fails, the radio sounds a short, low pitched tone. If this happens, tap **Pair** to resume pairing.

 The LEX L10g remembers the radio and will automatically resume connection whenever the radio is on and within connection range.



Chapter 9

ADB and USB Driver Setup

This chapter describes how to set up the Android Debug Bridge (ADB) and USB driver for your Windows PC. The ADB and USB driver are required to perform Fastboot OS updates and to capture debug logs using ADB. They are also used to push files onto a device and for APK installation.

9.1

Required Software and Hardware

In order to install the ADB and USB driver, certain software and hardware requirements must be met.

- Hardware (one of the following)
 - Windows PC running Window 8
 - Windows PC running Window 7 32/64 bits
 - Windows PC running Windows XP SP3 with Micro-B USB Cable
- Software
 - LEX_L10g.zip (contains ADB and USB drivers)
 - Android SDK (adb utility) installation procedure available at the following link: https://developer.android.com/sdk/installing/index.html?pkg=tools

9.2

Installing USB Driver and ADB


Prerequisites: Ensure all old USB drivers are removed before beginning this procedure.

When and where to use: Use this procedure to install the USB driver and ADB.

Procedure:


- 1 Insert the provided LEX L10g ADB USB Driver CD into a CD or DVD drive.
- 2 Click the **Start** button and select **Computer**.

Figure 99: Access Computer

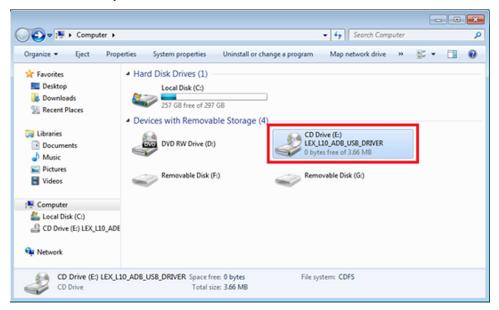

- **3** Open the CD drive and copy *LEX_L10g_zip* to your desktop.
- 4 Extract the LEX_L10g_zip file copied on your desktop to C:\Program Files (x86) or any other location in your OS installation drive where you prefer to keep the driver, and then select **OK**.


Figure 100: Select Destination

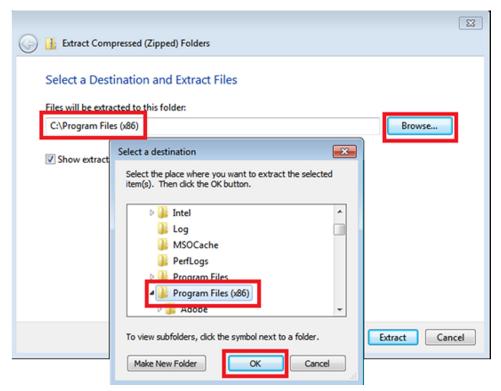

- **5** Enable USB debugging in your device by:
 - a On the LEX L10g, navigate to **Settings** → **About Phone** and click the build number seven times to enable developer options.


- **b** Tap to return to **Settings**; then, tap **Developer options** and click the checkbox for **USB Debugging**.
- c Click **OK** when prompted to allow USB debugging.
- 6 Configure the driver in the **Device Manager**.
 - a On your computer, click the Start button and search for Device Manager and open it.

Figure 101: Access Device Manager

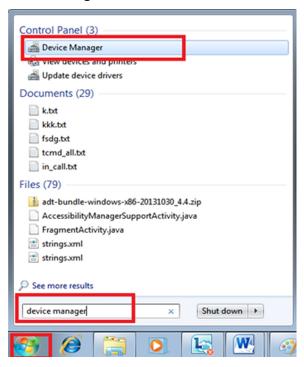


b Find Android under **Other devices** right-click and select **Update Driver Software**.

Figure 102: Select Update Drive Software

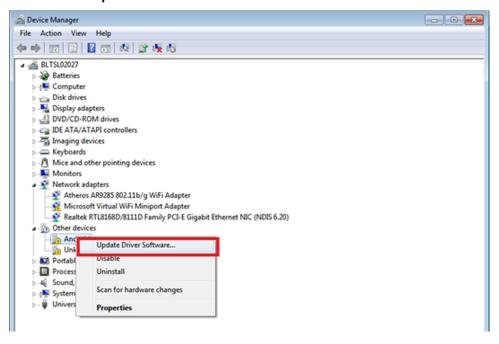

c Select Browse my computer for driver software.

Figure 103: Select Browse my computer for driver software

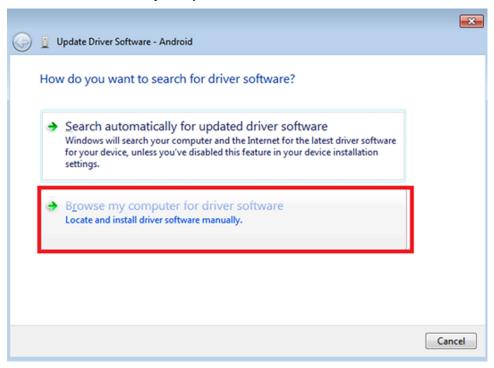


- **d** Click **Browse** and select the folder where the driver was extracted (that is, *C:\Program Files* (x86)\Lex L10g_ADB_USB_Driver or the custom path chosen by you at the time of extracting the LEX L10g.zip file.
- e Click OK and then click Next.
- f If prompted, select Install this driver software anyway.

Figure 104: Select Install this driver software anyway




g Click Close to complete the installation.

Figure 105: Close the Installation

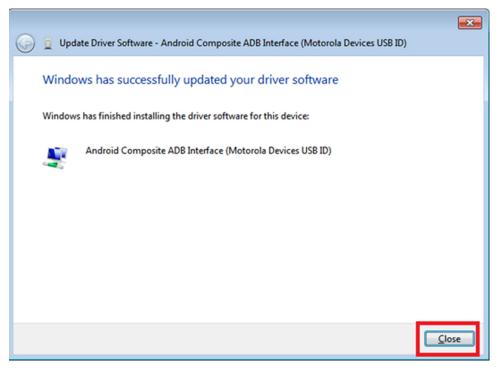

The driver is now installed.

 - 7 Set up the ADB USB profile on your PC as follow-up with these steps:
 - **a** After driver installation, make sure there is a .android folder in your user profile directory.
 - **b** If you have installed and run ADB for the device before, run adb kill- server before you can use the ADB.
 - **c** To see if ADB installs successfully, run adb devices from the command line.



Chapter 10

Accessories

This chapter provides information for using the accessories associated with the LEX series device.

10.1

Accessories

This section lists the LEX L10g accessories along with specifications.

General Accessories:

- Replaceable Standard Battery Li-Ion 2340 mAh 3.7V
- Replaceable High-capacity Battery Pack Li-Ion 4680 mAh 3.7V
- Handheld Standard Battery Door
- Handheld Extended Battery Door
- LEX L10g Auto Charge (Vehicle Power Adapter)
- Power Supply
- Carry Accessory Glove LEX L10g Rubber Sleeve
- Desktop Cradle
- Vehicle Cradle
- USB Cable
- Holster

10.2


USB Cable

A USB cable is necessary to connect your LEX L10g to a charger.

The USB cable:

- Connects the device to a USB charger to charge the LEX L10g.
- Provides USB communication with a host computer. When the LEX L10g is connected to a host computer, the device appears as a removable disk on the host computer.

Figure 106: USB Cable

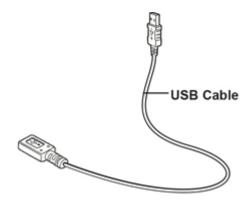

10.3

Desktop Cradle

A desktop cradle provides an alternative method to charge your LEX L10g.

The desktop cradle:

- · Provides power for charging and operating the device.
- Enables connecting a mouse to the device.

Figure 107: Desktop Cradle



Charging the LEX L10g

To charge the device, insert the units by placing the bottom of the device, at a slight forward angle, into the cradle.

The LED shows the status of the battery charging. See Battery Charge LED Status for charging status indications. The 2280 mAh battery charges in approximately four hours.

Charge the LEX L10g device in temperatures from 0°C to +45°C (32°F to 113°F)). Note that charging is intelligently controlled by the device. To accomplish this, for small periods of time, the LEX L10g alternately enables and disables battery charging to keep the battery at acceptable temperatures. The device indicates when charging is disabled due to abnormal temperatures via its notification LED.

10.4

Vehicle Cradle

Install the vehicle mount on the surface of the vehicle that is reasonably flat and free of dirt and oil. Clean the mounting surface with a glass cleaner and a clean cotton cloth. Install the vehicle mount on the windshield or other flat car surface.



CAUTION: Some states prohibit the mounting of any electronic device in any location on the vehicle dashboard. Be sure to check with local laws acceptable mounting areas before installing the auto mounting kit.

Figure 108: Vehicle Cradle



10.5


Holster

Use the holster to securely carry the LEX L10g when working. The holster is threaded through a belt and stores the device when not in use or when using a headset.

Figure 109: Holster



 Insert the device into the holster with the screen facing in or out.



Chapter 11

Maintenance and Troubleshooting

This chapter includes instructions on cleaning and storing the device, and provides troubleshooting solutions for potential problems during device operation.

11.1

Maintaining the LEX Series Device

For trouble-free service, observe the following tips when using the LEX L10g:

- Do not scratch or use a pen or a pencil or other sharp object on the surface of the screen.
- The touch-sensitive screen is made of polycarbonate. Do not to drop or subject the device to strong impact.
- Protect from extreme temperatures. Do not leave device on the dashboard of a car on a hot day, and keep it away from heat sources.
- Do not store in any location that is dusty, damp, or wet.
- Use a soft lens cloth to clean the device. If the surface of the screen becomes soiled, clean it with a soft cloth moistened with isopropyl alcohol.
- Periodically replace the rechargeable battery to ensure maximum battery life and product performance. Battery life depends on individual usage patterns.

11.2

Battery Safety Guidelines

Adhere to the following guidelines for battery safety:

- The area where the units are charged should be clear of debris and combustible materials or chemicals.
- Follow battery usage, storage, and charging guidelines found in this guide.
- Improper battery use may result in a fire, explosion, or other hazard.
- To charge the battery, the battery and charger temperatures must be between +32 °F and +113 °F (0 °C and +45 °C)
- Do not use incompatible batteries and chargers. Use of an incompatible battery or charger may
 present a risk of fire, explosion, leakage, or other hazard. If you have any questions about the
 compatibility of a battery or a charger, contact Motorola Solution support.
- If charging through a USB port, the device shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- To enable authentication of an approved battery, as required by IEEE1725 clause 10.2.1, all batteries will carry a Motorola hologram. Do not fit any battery without checking it has the Motorola authentication hologram.
- Do not disassemble or open, crush, bend or deform, puncture, or shred.
- Severe impact from dropping any battery-operated device on a hard surface could cause the battery to overheat.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, or expose to fire, explosion, or other hazard.

Chapter 11: Maintenance and Troubleshooting

- Do not leave or store the equipment in or near areas that might get very hot, such as in a parked vehicle or near a radiator or other heat source. Do not place battery into a microwave oven or dryer.
- Battery usage by children should be supervised.
- Follow local regulations to properly dispose of used rechargeable batteries.
- Do not dispose of batteries in fire.
- In the event of a battery leak, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with large amounts of water and seek medical advice.
- If you suspect damage to your equipment or battery, contact Motorola Solutions support to arrange for inspection.

11.3

Cleaning Guidelines

This section includes cleaning guidelines for the LEX L10g.



WARNING: Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines. Avoid exposing this product to contact with hot oil or other flammable liquids. If such exposure occurs, unplug the device and clean the product immediately in accordance with these guidelines.



CAUTION:

Always wear eye protection.

Read the warning labels on compressed air and alcohol products before use.

If you have to use any other solution for medical reasons, contact Motorola Solutions for more information.

Approved Cleanser Active Ingredients

100% of the active ingredients in any cleaner must consist of one or a combination of the following: isopropyl alcohol, or mild dish soap.

Cleaning Instructions

Do not apply liquids directly to the device. Dampen a soft cloth or use pre-moistened wipes. Do not wrap the device in the cloth or wipe, but gently wipe the unit

Harmful Ingredients

Many vinyl gloves contain phthalate additives, which are often not recommended for medical use and are known to be harmful to the housing of the device. The device should not be handled while wearing vinyl gloves containing phthalates, or before hands are washed to remove contaminant residue after gloves are removed. If products containing the harmful ingredients are used before handling the device, such as hand sanitizers containing ethanolamine, hands must be completely dry before handling the device to prevent damage to the plastics.

Cleaning Materials Required

- Alcohol wipes
- Lens tissue
- Cotton-tipped applicators

- Isopropyl alcohol
- · Can of compressed air with a tube

Cleaning Frequency

The cleaning frequency is up to your discretion due to the varied environments in which the mobile devices are used. They may be cleaned as frequently as required, but it is advisable to clean the camera window periodically when used in dirty environments to ensure optimum performance.

11.4

Cleaning the LEX Series Device

This section includes instructions on how the LEX L10g should be cleaned.

Housing

Using the alcohol wipes, wipe the housing including buttons.

Display

The display can be wiped down with the alcohol wipes, but care should be taken not to allow any pooling of liquid around the edges of the display. Immediately dry the display with a soft, non-abrasive cloth to prevent streaking.

Camera Window

Wipe the camera window periodically with a lens tissue or other material suitable for cleaning optical material such as eyeglasses.

11.5

Cleaning the Interface Connector

When and where to use: Use this procedure To clean the contacts of the interface connector on LEX L10g.

Procedure:

- 1 Power off the device.
- 2 Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
- 3 Rub the cotton portion of the cotton-tipped applicator along the contacts of the interface connector. Slowly move the applicator back-and-forth from one side of the connector to the other
- 4 If grease and other dirt can be found on other areas of the cradle, remove using a lint-free cloth and alcohol.
- **5** Allow few minutes (depending on ambient temperature and humidity) for the alcohol to air dry before powering on the device.

11.6

Cleaning the Battery Contacts

When and where to use: Perform this procedure to clean the battery connectors.

Procedure:

1 Remove the main battery from device.

- 2 Dip the cotton portion of the cotton-tipped applicator in isopropyl alcohol.
- **3** Gently, rub the cotton portion of the cotton-tipped applicator back-and-forth across the contacts. Do not leave any cotton residue on the contacts.
- **4** Use the cotton-tipped applicator dipped in alcohol to remove any grease and dirt near the contacts area.
- **5** Use a dry cotton-tipped applicator and repeat steps 4 and 5 at least three times.



CAUTION: Do not point nozzle at yourself and others. Ensure that the nozzle or tube is away from your face.

- **6** Spray compressed air on the connector area by pointing the tube/nozzle about ½ inch away from the surface.
- 7 Inspect the area for any grease or dirt, repeat if required.

11.7

Troubleshooting

This section lists common problems and solutions to fix the problems.

Table 9: Troubleshooting the LEX Series Device

Problem	Cause	Solution
After pressing the Power button, does not turn on.	Battery is completely discharged.	Re-charge or replace the battery.
	Battery not installed properly.	Install the battery properly. See Installing the Battery.
	Power button not held down long enough.	Press the Power button until the Motorola Solutions splash screen is displayed.
	Device not responding.	Reset the device.
After pressing the Power button, the device does not turn on but a charge battery icon Appears.	Battery charge level is very low.	Re-charge or replace the battery.
After connecting the device to a Cable, a battery charging icon Appears.	Battery is depleted but is charging.	Press and hold the Power button to turn on.
When charging, the LED slowly blinks red.	The device is at an ex-tremely low-power state.	Charge the device for a few minutes. The LED changes to flashing green then press the Power button to turn on the device. If LED continuously blinks red, check power connections. Disconnect and reconnect connections.

Table continued...

Problem	Cause	Solution
Battery did not charge.	Battery failed.	Replace battery. If the device still does not operate, perform a hardware reset.
	Device was removed from power while battery was charging.	Insert device in cradle or attach Charge Cable. The 2280 mAh battery fully charges in approximately four hours.
	Extreme bat- tery tempera- ture.	Battery does not charge if ambient temperature is below 0 °C (32 °F) or above 45 °C (113 °F).
During data com- munication with a host computer, no data transmitted, or transmitted data was incomplete.	Device re- moved from USB cable or disconnected from host computer during com- munication.	Reattach the communication cable and re-transmit.
	Incorrect ca- ble configura- tion.	See technical support.
During data com- munication over Wi- Fi, no data trans- mitted, or transmit- ted data was in- complete.	Wi-Fi radio is not on.	Turn on the Wi-Fi radio.
	You moved out of range of an access point.	Move closer to an access point.
During data communication over Bluetooth, no data transmitted, or transmitted data was incomplete.	Bluetooth radio is not on.	Turn on the Bluetooth radio.
	You moved out of range of another Bluetooth device.	Move without 10 m (32.8 ft.) of the other device.
During data com- munication over Public / Private, no data transmitted, or transmitted data was incomplete.	You are in an area of poor cellular service.	Move into an area that has better service.
	VPN is not set up correctly.	See technical support for VPN setup information.
	SIM card not installed properly.	Remove and re-install the SIM cards.

Table continued...

Problem	Cause	Solution
	Data plan not activated.	Contact your service provider and ensure that your data plan is enabled.
No sound.	Volume set- ting is low or turned off.	Adjust the volume.
Device turns off.	Device is in- active.	The display turns off after a period of inactivity. Set this period to 15 seconds, 30 seconds, 1, 2, 5, 10, or 30 minutes.
	Battery is depleted.	Recharge or replace the battery.
	Extreme bat- tery tempera- ture.	Move device to an area where the ambient temperature is between 0 °C (32 °F) or above 45 °C (113 °F).
A message appears stating not enough storage memory.	Too many applications installed on the device.	Remove user-installed applications on the device to recover memory. Select \longrightarrow \longrightarrow Apps \longrightarrow Downloaded. Select the unused programs and tap Uninstall.
Device cannot find any Bluetooth devices nearby.	Too far from other Blue-tooth devices.	Move closer to the other Bluetooth device(s), within a range of 10 meters (32.8 feet).
	The Blue- tooth de- vice(s) near- by are not turned on.	Turn on the Bluetooth device(s) to find.
	The Blue- tooth de- vice(s) are not in discov- erable mode.	Set the Bluetooth device(s) to discoverable mode. If needed, refer to respective Bluetooth-enabled device (accessory) user manual
Visual Voicemail is not working.	Using a Verizon SIM card on LEX L10g device.	To resolve visual voicemail issue, see Resolving Visual Voicemail for LEX L10g on page 88.

11.8

Back Up or Restore Data on Your Device

Back up data on the LEX L10ig manually, by exporting VC files, or using Google or restore data on your device by managing android or Google settings.

11.8.1

Backing Up the LEX Series Device Manually

Backing up the LEX L10g must be done manually.

Prerequisites: A USB cable to connect the device to a computer.

When and where to use: Use this procedure anytime a backup is necessary.

Procedure:

1 Connect the device to a computer using the supplied USB cable.

The first time you connect to a computer the following message is displayed: Installing Device Driver Software

After the driver software is installed, the following message is displayed:

Your device is ready to use

- 2 Click the **Start** button and then select **Computer**.
- 3 Select the LEX L10g Portable Device.
- 4 Select Internal storage.
- 5 Navigate to the files that you want to back up.
- **6** Copy the files/folders to a secure location on your computer.

11.8.1.1

Backing up Contacts with Android

To back up contacts, the contacts must be exported to a VCF file which must be copied to a secure location.


Prerequisites: Contacts must exist in the contact list.

When and where to use: Use this procedure to periodically back up your contacts.

Procedure:


- 1 Tap ...
- 2 Tap <equation-block>
- **3** Tap **3**
- 4 Tap ...
- 5 Select Import/export.

Figure 110: Import/Export Contacts Popup

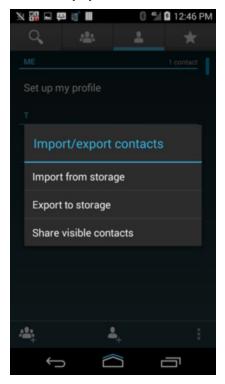

6 Select Export to storage.

Figure 111: Export Confirmation Popup

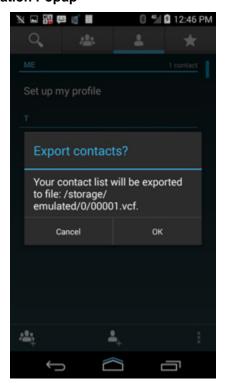

7 Tap **OK** to export the contacts.

The VCF file is saved to the location indicated.

8 Follow the procedure under Backing Up the LEX Series Device Manually on page 166 to complete the contacts backup.

11.8.1.2

Syncing Mail, Contacts, Calendar, and More with Google

When and where to use:

Your Android phone syncs mail, contacts, calendar, and more with Google.

Procedure:

- 2 Tap 🔯
- Select Google.
- 4 Under Accounts section, select preferred email account.
- 5 Select the checkbox next to the application to be synched.

11.8.1.3

Backing Up Your Data and Settings with Android Backup Service

When and where to use:

Use Android Backup Service to back up data connected to one or more of your Google Accounts. If you had to replace your device or erase its data, you can restore your data using any account that you backed up.

The following data and settings are backed up with the Android Backup Service:

- Google Calendar settings
- Wi-Fi networks and passwords
- · Home screen wallpapers
- Gmail settings
- Apps installed through Google Play (backed up on the Play Store app)
- Display settings (Brightness and Sleep)
- Language and Input settings Date and Time
- Third-party app settings and data (varies by app)

Procedure:

- Tap [™].
- 2 Tap 😱
- 3 Tap Backup & reset.
- 4 Select the checkbox next to **Back up my data** to back up data.

11.9

Resetting the LEX Device

Use this procedure to reset the LEX L10g.

When and where to use: If the device does not operate properly, perform the following procedure.

Procedure:

1 Power off and on the device and verify if the problem is gone.

The device restarts. If the problem remains, perform Step 2.



CAUTION: To avoid erasing important data from your device, do not press any of the buttons during power up.

2 Remove the battery, reinsert it, and verify if the problem is gone.

The device restarts. If the problem remains, perform factory data reset.

11.9.1

Performing Factory Data Reset

A factory data reset is a software restore of the LEX L10g to its original manufacturer settings. Before resetting the device, back up your data. Factory data reset erases all your personal data from the LEX L10g memory and microSD card including: configuration, contents, accounts, installed applications, user settings, music, photos, videos, installed licenses, pre-loaded application updates, DM bootstrapping data, integrated and pre-loaded application configuration, post-loaded applications and user passwords. After reset is performed, re-enter your backed up information.

When and where to use: Use this procedure to perform factory data reset:



CAUTION: Factory data reset is performed only by technical support as a last resort when the LEX L10g fails to operate. Before performing factory data reset, remove the SIM and microSD cards from the device. Performing factory data reset with a microSD or SIM cards installed may cause data corruption or loss.



NOTICE: Factory data reset configures the LEX L10g to public communication only. To return to combined Public and Private configuration, see your technical support. The last updated firmware and the initial version of pre-loaded applications are preserved through a reset to factory defaults.

Procedure:

- 1 Tap ...
- 2 Tap 🔯
- 3 Tap Backup & reset.
- 4 Tap Factory data reset.

The device powers off, powers on, then the system recovery screen appears.

Chapter 12

Technical Specifications

The following table summarizes the LEX series operating, environment, and technical hardware specifications.

Table 10: Technical Specifications

Item	Specification
Physical	
Dimensions (H x W x D)	5.62 x 2.85 x 0.547 in
	143 x 72.6 x 13.0 mm
Weight	195 g (6.88 Oz) including standard battery
Durability	Continues to run after multiple drops to concrete from a height of 48 inches (121 cm)
	Drop tested using MIL-STD-810G Method 516.6, Procedure IV
	IP67 (1 meter water immersion for 30 minutes)
Display	4.7" 720p HD (720 x 1280)
	Capacitive touch screen
Operating Temperature	14°F to 131°F (-10°C to +55°C)
Storage Temperature	-22°F to 149°F (-30°C to +65°C)
Hardware	
Processor	2.3 GHz
	Quad Core Processor
	Qualcomm MSM8974AA
Display	4.7" 720p HD (720X1280)
	Capacitive, touch screen
Memory	2 GB RAM
	16 GB eMMC
	Expandable to 64GB with microSD [™] card
Camera	Rear 8MP Camera Auto Focus High-Output LED Flash Digital Zoom Front 2MP Camera
Sensors	Proximity Sensor Ambient Light Sensor Accelerometer Sensor

Table continued...

Item	Specification	
	Barometer Sensor E-Compass	
Ports	USB 2.0 High-Speed 3.5 mm Audio Jack (stereo) Accessory/Charging Port	
Battery	Standard - 2380 mAh, 10 hours High Capacity - 4560 mAh, 20 hours	
Software		
Operating System	Android [™] KitKat 4.4.4	
User Interface	Google Launcher is the default application launcher. MHX launcher is post loadable from Google Play Store.	
Messaging	SMS/MMS Email (Corporate Sync, POP3, IMAP, Push Email)	
Web	Chrome	
LTE		
Release	3GPP Release 9	
Band Class Band 4, 13		
	Band 14 (Public Safety LTE)	
Output Power	23 dBm +/- 2 dB (UE power class 3)	
Bandwidth	5 MHz, 10 MHz Broadband data throughput depends on network conditions	
CDMA		
Standards	EVDO Rev. A (Band 0, Band 1) 3G, 1X	
Frequencies	800/1900 MHz	
Wi-Fi		
Operating Band	2.4 GHz, 5 GHz	
Standards	802.11 a/b/g/n	
Personal Area Networks	s	
Bluetooth	Bluetooth 4.0 Low Energy (LE) + Enhanced Data Rate (EDR) Mission Critical Wireless Bluetooth Max throughput 2.1 Mbps A2DP Stereo Profile	
GPS		
Location Services	Standalone GPS Assisted GPS (aGPS)	

Table continued...

Specification	
Supports OMA-DM (Open Mobile Alliance Device Management)	
H.263, H.264, MPEG-4 SP, VP8, JPEG (.jpg), GIF (.gif), PNG (.png) BMP (.bmp), WebP (.webp)	
Formats supported for playback, streaming and recording	
3GPP (.3gp), MPEG-4 (.mp4), WebM (.webm), (.mkv)	
1080p HD up to 30 frames per second (fps)	



NOTICE: Video and images are time stamped for evidence documentation.

Audio	
Supported Formats	MP3, WAVE, AAC, AMR-NB, AMR-WB, FLAC, MIDI, Vorbis
Supported File Types	MP3 (.mp3), WAVE (.wav), 3GPP (.3gp), MPEG-4 (.mp4, m4a), ATDS raw AAC (.aac), MPEG-TS (.ts) FLAC (.flac), MIDI (.mid, .xmf, .mxmf), RTTTL/RTX (.rtttl, rtx), OTA (.ota), iMelody (imy), Ogg (.ogg), Matroska (.mkv)
Output	Dual 1 Watt Front-Facing Speakers, 106 dB Sound Pressure Level (SPL) 3.5 mm audio jack (stereo) Bluetooth (A2DP stereo)
Input	Triple Noise and Echo Cancelling Microphones
Quick Access Leather Ho	olster
Dimensions (H x W x D)	5.7 x 3.5 x 2.0 in (145 x 90 x 50 mm)

Specifications subject to change.

Table 11: General Accessories

Item	Desktop Cradle	Impact-Rated Vehicle Cradle
Physical		
Dimensions (H x W x D)	6.0 x 5.0 x 3.5 in (152 x 128 x 89 mm)	6.1 x 3.0 x 2.2 in (155 x 76 x 56 mm)
Weight	12.8 Oz (363 g)	4.8 Oz (135 g)
Environmental Specification		
Operating Temperature	32°F to 113°F (0°C to +45°C)	-4°F to 131°F (-20°C to +55°C)
		Table continued

Table continued...

Item	Desktop Cradle	Impact-Rated Vehicle Cradle
Storage Temperature	-40° F to 158°F (-40°C to 70°C)	-40° F to 185°F (-40°C to +85°C)
Humidity	95% at 113°F (45°C) for 8 hours (non-condensing)	95% at 131°F (55°C) for 8 hours (non-condensing)
Durability		
Salt Fog	Yes	Yes
Vibration	Yes	Yes
Drop	Yes	Yes
Shock (Functional)	Yes	Yes
Shock (Crash Hazard)		Yes, MIL-STD-810G, 75G impact
ESD	Yes	Yes
Solar Radiation		Yes
Liquid Resistance	Yes	Yes
Safety Regulatory		
Electrical Safety	US: UL60950	US: UL60950
EMI/RFI	FCC part 15, Subpart B, Class B28a	
ANSI C63.4 2009	FCC part 15, Subpart B, Class B28b	
Flammability	ANSI/UL-94 and ASTM Standards	ANSI/UL-94 and ASTM Standards
Electrical		
Power Supply	External power supply input 100- 240VAC output 5.0VDC 1.2A	12V-24V, 5.0VDC, 1.2A
Power Input	5.0 VDC, 1.2A	5.0 VDC, 1.2A
DC Output	5.0VDC	5.0VDC
Power On	With device insertion	With device insertion
Optional Accessories		
Vehicle Ram® Mount Kit		

Specifications subject to change.